



| Parts List | | | | | | |
|------------|-------|----------|-------------------------------|-----|---------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 84 | 98423A 7 | WIRING HARNESS (898/200) | 1 | | |
| 1 | 84 | 98423A 8 | WIRING HARNESS (228/230/260) | 1 | | |
| 2 | | 26079A 2 | PLATE, WIRING HARNESS TO M | 1 | | |
| 3 | 10 | 34696 | SCREW, WIRING HARNESS PLA | 4 | | |
| 4 | | 98493A 2 | BRACKET, MOUNTING | 1 | | |
| 5 | 10 | 49668 | SCREW, MOUNTING BRACKET | 3 | | |
| 6 | 13 | 26992 | LOCKWASHER, MOUNTING BRA | 3 | | |
| 7 | 390 | 7804A 3 | IGNITION AMPLIFIER | 1 | | |
| 8 | 10 | 76596 | SCREW, IGNITION AMPLIFIER (1- | 3 | | |
| 9 | 13 | 26992 | LOCKWASHER, IGNITION AMPLII | 3 | | |
| 10 | 23 | 92152 | SPACER, IGNITION AMPLIFIER A | 3 | | |
| 11 | | 97258A 1 | WATER TEMPERATURE SENDER | 1 | | |
| 11 | | 49734A 1 | WATER TEMPERATURE SENDER | OPT | | |
| 12 | 13 | 26996 | LOCKWASHER, WATER TEMPE | 1 | | |
| 13 | 11 | 68219 | NUT, WATER TEMPERATURE | 1 | | |
| 14 | | 90806 | OIL PRESSURE SENDER | 1 | | |
| 14 | | 37293 | OIL PRESSURE SENDER (DUAL) | OPT | | |
| 15 | 13 | 26996 | LOCKWASHER, OIL PRESSURE | 1 | | |
| 16 | 11 | 68219 | NUT, OIL PRESSURE SENDER | 1 | | |
| 17 | 22 | 46932 | ELBOW, OIL PRESSURE SENDEF | 1 | | |
| 18 | 22 | 42554 | NIPPLE, OIL PRESSURE SENDEF | 1 | | |
| 19 | | 41170A 2 | BRACKET, MOUNTING | 1 | | |
| 20 | 10 | 98260 | SCREW, MOUNTING BRACKET (E | 1 | | |
| 21 | 13 | 35048 | LOCKWASHER, MOUNTING BRA | 1 | | |
| 22 | 54 | 78945 | CLAMP, BRACKET SCREW | 1 | | |
| 23 | 16 | 24585 | STUD, MOUNTING BRACKET | 1 | | |
| 24 | 12 | 20086 | WASHER, MOUNTING BRACKET | 1 | | |
| 25 | 11 | 24883 | NUT, MOUNTING BRACKET STU | 1 | | |
| 26 | 10 | 32132 | SCREW, MOUNTING BRACKET | 1 | | |
| 27 | 13 | 35048 | LOCKWASHER, MOUNTING BRA | 1 | | |
| 28 | 23 | 88275 | SPACER, MOUNTING BRACKET | 1 | | |
| 29 | 88 | 93582 | CIRCUIT BREAKER (60 AMP) | AR | | |
| 29 | 88 | 11178 | CIRCUIT BREAKER (50 AMP) | AR | | |
| 30 | 13 | 26996 | LOCKWASHER, CIRCUIT BREAK | 2 | | |
| 31 | 11 | 68219 | NUT, CIRCUIT BREAKER TERMIP | 2 | | |
| 32 | 10 | 45862 | SCREW, CIRCUIT BREAKER (7/8 | 2 | | |
| 33 | 10 | 45218 | SCREW, INSULATOR (3/8") | 1 | | |
| 34 | 12 | 56681 | WASHER, CIRCUIT BREAKER SC | 2 | | |
| 35 | 11 | 46438 | NUT, INSULATOR SCREW | 3 | | |
| 36 | 85 | 96819 | INSULATOR, CIRCUIT BREAKER | 1 | | |
| 37 | 89 | 96054 | STARTER SOLENOID | 1 | | |