



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		98626A 3	EXHAUST SEPARATOR	1		
2	10	37612	SCREW (1-1/4 IN.)	4		
3	13	35048	LOCKWASHER	4		
4	25	35029	O-RING	2		
5		60931	RETAINER	2		
6		60930	WATER SHUTTER	2		
7		94018A 1	EXHAUST ELBOW ASSEMBLY	2		
8	10	58640	SCREW	6		
9	13	58643	LOCKWASHER	6		
10	32	48659 4	EXHAUST HOSE	4		
11	54	815504256	CLAMP	20		
12		94608A 1	EXHAUST TUBE ASSEMBLY	2		
13		98630A 1	EXHAUST ELBOW	2	(USE WITH 3 IN. ELBOW)	
13		44390T	EXHAUST ELBOW	2	(USE WITH 4 IN. ELBOW)	
14		70981A 3	EXHAUST BELLOWS	2	(USE WITH 3 IN. ELBOW)	
14		78458A 1	EXHAUST TUBE	2	(USE WITH 4 IN. ELBOW)	
15		95740	GROUND STRAP	2		
16	54	815504372	CLAMP	4		
17		41063A 1	MOUNTING BRACKET ASSEMBLY	1		
18	10	24231	SCREW	1		
19	11	46438	NUT	1		
20		45315	TERMINAL BLOCK	1		