



DISTRIBUTOR AND IGNITION COMPONENTS

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		90747A27	DISTRIBUTOR	1		1
1		805185A26	DISTRIBUTOR	1		5
2		805759A 2	CAP	1		
3	27	805760	GASKET	1		
4	10	90926	SCREW	4		
5		13524A 5	ROTOR/SENSOR WHEEL	1		
11	87	91019A 3	SENSOR ASSY.	1	(W/ NUT CONNECTORS)	1
11	87	91019A 6	SENSOR ASSY.	1	(W/ BULLET CONNECTORS)	5
12	10	66686	SCREW	1	(1 IN.)	
12	10	72202	SCREW	1	(1-1/4 IN.)	
13	43	818807	DRIVE GEAR	1		
14	17	47617	PIN	1		
15	23	90915	BUSHING	2		
15A	12	90931	WASHER	1		
16	27	34486 3	GASKET	1		4
17		52185	CLAMP	1		
18	10	806681	SCREW	1		
19	13	26996	LOCKWASHER	2		
20	11	68219	NUT	2		
21	84	816761A 4	SPARK PLUG WIRE KIT	1		1
21	84	816761A17	SPARK PLUG WIRE KIT	1		5
22	85	63709A 1	BOOT ASSEMBLY	8		
23	33	59571	SPARK PLUG	8		
24		54676	RETAINER (2 WIRE)	2		
25		32783	RETAINER (3 WIRE)	2		
26		32784	RETAINER (4 WIRE)	2		
27	392	805570A 2	IGNITION COIL	1		
28		77294T	BRACKET	1		1
28		65970T 1	BRACKET	1		5
29	10	41408	SCREW (1-1/2 IN.)	1		
30	12	30164	WASHER	2		
31	13	26996	LOCKWASHER	2		
32	11	68219	NUT	2		
33	10	98261	SCREW (3/4 IN.)	1		
36	16	90096A 1	STUD ASSEMBLY	2	NEW DESIGN	
37	54	72821	RETAINER	2	NEW DESIGN	