



DISTRIBUTOR AND IGNITION COMPONENTS

				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		90747A 3	DISTRIBUTOR ASSEMBLY	1		
2		43557A 1	CAP, DISTRIBUTOR	1		
3		90926	SCREW, DISTRIBUTOR CAP	4		
4	27	98242	GASKET, DISTRIBUTOR CAP	1		
5		13524A 3	ROTOR	1		
6		42862	SENSOR WHEEL	1		
7	10	11252	SCREW, SENSOR WHEEL	3		
8	87	91019A 3	SENSOR ASSEMBLY	1		
9	10	47618	SCREW, SENSOR	2		
10	12	27736	WASHER, SENSOR SCREW	2		
11	43	47619	GEAR, DRIVE	1		
12	17	47617	PIN, DRIVE GEAR	1		
13	27	34486 1	GASKET, DISTRIBUTOR	1		
14		52185	CLAMP, DISTRIBUTOR TO INTAK	1		
15	10	35169	SCREW, DISTRIBUTOR CLAMP (1		
16	12	30164	WASHER, DISTRIBUTOR TERMINI	2		
17	13	26996	LOCKWASHER, DISTRIBUTOR T	2		
18	11	68219	NUT, DISTRIBUTOR TERMINAL (2		
19	84	42841A10	LEAD ASSEMBLY, DISTRIBUTOR	1		
20	84	43376A 4	SPARK PLUG WIRE KIT (L.H. RO	1		
20	84	43376A 3	SPARK PLUG WIRE KIT (R.H. RO	1		
21	85	63709A 1	BOOT ASSEMBLY, SPARK PLUG	8		
22	33	59571	SPARK PLUG (NGK-BR6FS)	8		
23		54676	RETAINER, HIGH TENSION LEAC	2		
24		32783	RETAINER, HIGH TENSION LEAC	2		
25		32784	RETAINER, HIGH TENSION LEAC	2		
26	392	7803A 4	COIL, IGNITION	1		
27		77294	BRACKET, IGNITION COIL	1		
28	10	41408	SCREW, BRACKET (1-1/2")	1		
29	12	31064	WASHER, IGINTION COIL TERMI	2		
30	13	26996	LOCKWASHER, IGNITION COIL T	2		
31	11	68219	NUT, IGNITION COIL TERMINAL	2		
32	10	59645	SCREW, IGNITION COIL (3/4")	2		
33	13	26993	LOCKWASHER, IGNITION COIL S	2		
34	12	20084	WASHER, IGNITION COIL SCREW	2		