



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	46	72774A32	WATE PUMP ASSEMBLY	1			
2	46	72774A40	BODY, WATE PUMP	1			
3		87631A 1	COFER, WATER PUMP	1			
4	10	73275	SCREW, WATER PUMP(2-7/8")	2			
4	10	89310	SCREW, WATER PUMP (3-1/2")	3			
5	12	20084	WASHER, COVER SCREW	5			
6	27	94915	GASKET, COVER TO OUTER W	1			
7		94916	WEAR PLATE, OUTER	1			
8	27	94914	GASKET, BODY TO WEAR PLA	2			
9	19	59504	PLUG, IMPELLER	1			
10	47	59362	IMPELLER	1			
11	28	56662	KEY, IMPELLER DRIVE	1			
12		94576	WEAR PLATE, INNER	1			
13	25	94288	QUAD RING, PUMP HOUSING	1			
14	46	94913A 1	PUMP HOUSING ASSEMBLY	1			
15	26	90562	OIL SEAL, WATER PUMP SHA	2			
16	30	72961	BALL BEARING, WATER PUM	2			
17		59501A 1	SHAFT, WATER PUMP	1			
18	53	23720	SNAP RING, BALL BEARING F	1			
19	26	72785	OIL SEAL, WATER PUMP SHA	1			
20		47530	HUB, WATER PUMP PULLEY	1			
21		73798A 1	PULLEY, WATER PUMP	1			
22	10	47277	SCREW, PULLEY (3/4")	4			
23	13	39107	LOCKWASHER, PULLEY SCREW	4			
24	13	39107	LOCKWASHER, WATER PUMP S	3			
25	11	21908	NUT, WATER PUMP SCREW	3			
26		89535	BRACKET, WATER PUMP	1			
27	10	34353	SCREW, WATER PUMP BRACKE	2			
28	13	35048	LOCKWASHER, WATER PUMP B	2			
29	12	34714	WASHER, WATER PUMP BRACK	1			
30		89609	BRACE, WATER PUMP ADJUSTI	1			
31	10	34353	SCREW, ADJUSTING BRACE (1"	1			
32	13	35048	LOCKWASHER, ADJUSTING BRA	1			
33	12	34714	WASHER, ADJUSTING BRACE S	1			
34	10	35786	SCREW, ADJUSTING BRACE (1"	1			
35	13	35048	LOCKWASHER, ADJUSTING BRA	1			
36	11	24883	NUT, ADJUSTING BRACE SCRE	1			
37	22	32802	PLUG, PIPE (FOR WATER PUM	1			
38	57	74271	BELT, WATER PUMP (35")	1			