



| Parts List | | | | | | |
|------------|-------|----------|-----------------------------|-----|---------------------------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 50 | 76965A 3 | STARTER, L.H. ROTATION (DEL | 1 | | |
| 1 | 50 | 79604A 3 | STARTER, R.H. ROTATION (DEL | 1 | | |
| 2 | 10 | 47462 | SCREW, STARTER MOTOR (1-1/ | 2 | | |
| 3 | 13 | 32993 | LOCKWASHER, STARTER MOTO | 2 | | |
| 4 | 11 | 32219 | NUT, STARTER TERMINAL (3/8- | 1 | | |
| 5 | 85 | 79695 | BOOT, INSULATOR-STARTER TE | 1 | | |
| 6 | 13 | 26995 | LOCKWASHER, STARTER TERMI | 1 | | |
| 7 | 11 | 26419 | NUT, STARTER TERMINAL (#8-3 | 1 | | |
| 8 | | 92497A 3 | ALTERNATOR (55 AMP) | 1 | | |
| 9 | 13 | 26996 | LOCKWASHER, ALTERNATOR TI | 1 | | |
| 10 | 11 | 79989 | NUT, ALTERNATOR TERMINAL (| 1 | | |
| 11 | 13 | 21272 | LOCKWASHER, ALTERNATOR TI | 1 | | |
| 12 | 11 | 64015 | NUT, ALTERNATOR TERMINAL (| 1 | | |
| 13 | | 85013 | BRACE, ALTERNATOR ADJUSTI | 1 | | |
| 14 | 10 | 26487 | SCREW, ALTERNATOR BRACE (| 1 | | |
| 15 | 13 | 35048 | LOCKWASHER, ALTERNATOR BI | 1 | | |
| 16 | 12 | 34714 | WASHER, ALTERNATOR BRACE | 1 | | |
| 17 | 10 | 74824 | SCREW, ALTERNATOR BRACE (| 1 | | |
| 18 | 13 | 39107 | LOCKWASHER, ALTERNATOR BI | 1 | | |
| 19 | 12 | 26168 | WASHER, ALTERNATOR BRACE | 1 | | |
| 20 | 23 | 90523 | SPACER, ALTERNATOR BRACE | 1 | | |
| 21 | | 57908 11 | TUBING, ALTERNATOR LEADS | 2 | | |
| 22 | 12 | 96457 | WASHER, ALTERNATOR TERMI | 1 | | |
| 23 | | 93175T | BRACKET, ALTERNATOR | 1 | | |
| 24 | 10 | 37612 | SCREW, ALTERNATOR BRACKE | 3 | | |
| 25 | 13 | 35048 | LOCKWASHER, ALTERNATOR BI | 3 | | |
| 26 | 10 | 48308 | SCREW, ALTERNATOR (3-3/4") | 1 | | |
| 27 | 12 | 20553 | WASHER, ALTERNATOR BRACK | 2 | | |
| 28 | 23 | 33186 | BUSHING, ALTERNATOR BRACK | 1 | | |
| 29 | 11 | 23161 | NUT, ALTERNATOR BRACKET SI | 1 | | |
| 30 | 88 | 79023A91 | FUSE ASSEMBLY (90 AMP) | 1 | NOT USED ON LATER ENGINES | |
| 31 | 12 | 96457 | WASHER, FUSE TERMINAL | 1 | NOT USED ON LATER ENGINES | |
| 32 | 13 | 26992 | LOCKWASHER, FUSE TERMINAL | 1 | NOT USED ON LATER ENGINES | |
| 33 | 11 | 21825 | NUT, FUSE TERMINAL | 1 | NOT USED ON LATER ENGINES | |