



230

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	735	6538	PISTON AND PISTON PIN ASSEM	AR		
1	735	6617	PISTON AND PISTON PIN ASSEM	AR		
2	39	75609	RING, PISTON-8 SETS (STANDAF	8		
2	39	75981	RING, PISTON - 8 SETS (.030 O.S	AR		
3	23	85694	BEARING UNIT, CRANKSHAFT (S	4		
3	23	85695	BEARING UNIT, CRANKSHAFT M	AR		
3	23	85696	BEARING UNIT, CRANKSHAFT M	AR		
3	23	85697	BEARING UNIT, CRANKSHAFT M	AR		
4	23	85698	BEARING UNIT, CRANKSHAFT M	1		
4	23	85699	BEARING UNIT, CRANKSHAFT M	AR		
4	23	85700	BEARING UNIT, CRANKSHAFT M	AR		
4	23	52216	BEARING UNIT, CRANKSHAFT M	AR		
5	17	35312	PIN, DOWEL-REAR BEARING CAI	1		
6	26	58203	OIL SEAL, REAR BEARING CAP (L	2		
6	26	35313	OIL SEAL, REAR BEARING CAP (R	2		
7	230	4614	FLYWHEEL	1		
7	222	9558	FLYWHEEL	1		
8	10	49845	SCREW, FLYWHEEL TO CRANKS	6		
9	13	39131	LOCKWASHER, FLYWHEEL SCRE	6		
10		47608A	DRIVE PLATE, FLYWHEEL	1		
11	10	35091	SCREW, DRIVE PLATE TO FLYW	6		
12	13	35048	LOCKWASHER, DRIVE PLATE SC	6		
13	614	8164	CONNECTING ROD ASSEMBLY	8		
14	10	85802	BOLT, CONNECTING ROD CAP	16		
15	11	37493	NUT, CONNECTING ROD CAP E	16		
16	23	85701	BEARING SET, CONNECTING RO	8		
16	23	85702	BEARING UNIT (PAIR), CONNECT	AR		
16	23	85703	BEARING UNIT (PAIR), CONNECT	AR		
16	23	85704	BEARING UNIT (PAIR), CONNECT	AR		
16	23	85705	BEARING UNIT (PAIR), CONNECT	AR		
17	429	6537	CRANKSHAFT (L.H. ROTATION)	1		
17	429	8550	CRANKSHAFT (R.H. ROTATION)	1		
17	429	9519	CRANKSHAFT (L.H. ROTATION)	1		
17	429	9600	CRANKSHAFT (R.H. ROTATION)	1		
18	28	34466	KEY, CRANKSHAFT PULLEY ANC	2		