



**A- Audio Warning System**

- 1 - Drive Unit Oil Level
- 2 - Oil Pressure Switch

**B- Instrumentation System**

- 1 - Trim Sender
- 2 - Water Temperature Sender
- 3 - Oil Pressure Sender

**C- Charging and Starting System**

- 1 - Starter Slave Solenoid
- 2 - Circuit Breaker
- 3 - Starter
- 4 - Ground Stud
- 5 - Alternator
- 6 - Oil Pressure Cut-Off Switch
- 7 - Fuel Pump

- a - Harness Connector to EFI System Harness
- b - Positive (+) Power Wire to EFI System Harness
- c - Auxiliary Tachometer Lead
- d - 90 Amp Fuse (DO NOT Remove)

74925

14276

Parts List

| Ref | Class | Part      | Description            | Qty | Comment                          | Footnote |
|-----|-------|-----------|------------------------|-----|----------------------------------|----------|
| -   | 84    | 807921A 2 | HARNESS, Wiring        | 1   | (VST Fuel System) SN# 0K000000   |          |
| -   | 84    | 860223A 2 | WIRING HARNESS, Engine | 1   | (Fuel Cooled System) SN# 0K0001E |          |