



				Parts List			
Ref	Class	Part	Description	Qty	Comment	Footnote	
1		47753A 3	TRANSMISSION ASSEMBLY	1			
2	22	47629	ELBOW, TRANSMISSION TO OI	1			
3	23	36159	BUSHING, REDUCING - TRANS	1			
4	22	47631	ELBOW, TRANSMISSION TO OI	1			
5		47339A 4	ENGINE COUPLING ASSEMBLY	1			
6	19	47463	PLUG, EXPANSION - ENGINE	1			
7	23	58464	SLEEVE, ENGINE COUPLING	1			
8	53	47469	RING, SNAP - BALL BEARING	1			
9	23	47471	BEARING, ENGINE COUPLING	1			
10	24	47755	SPRING, GUIDE - ENGINE CO	1			
11	30	47470	BALL BEARING, ENGINE COU	1			
12		47333A 1	HOUSING ASSEMBLY, BEARIN	1			
13	25	47756	"O" RING, BEARING SUPPOR	1			
14	26	47465	OIL SEAL, BEARING SUPPOR	1			
15	31	47468	ROLLER BEARING, BEARING	1			
16	27	47903	GASKET, BEARING SUPPORT	1			
17	10	47462	SCREW, BEARING SUPPORT F	8			
18	13	32993	LOCKWASHER, BEARING SUP	8			
19		48461	ADAPTOR, OIL LEVEL GAUGE TL	1			
20	25	48462	"O" RING, OIL LEVEL TUBE ADA	1			
21		48463	TUBE, OIL LEVEL GAUGE	1			
22		48464	GAUGE, OIL LEVEL	1			
23	25	35276	"O" RING, OIL LEVEL GAUGE	1			
24		48466	BRACKET, MOUNTING - OIL LEV	1			
25	10	34290	SCREW, MOUNTING BRACKET T	2			
26	13	26992	LOCKWASHER, MOUNTING BRA	2			
27	54	48465	CLAMP, OIL LEVEL GAUGE TUBE	1			
28	10	20776	SCREW, OIL LEVEL GAUGE TUBI	1			
29	13	26992	LOCKWASHER, OIL LEVEL GAUC	1			
30	11	21825	NUT, OIL LEVEL GAUGE TUBE CI	1			
31		47338A 1	BRACKET ASSEMBLY, TRANSMI	1			
32		35852	MOUNT, TRANSMISSION MOU	1			
33	10	38197	SCREW, MOUNT BRACKET TO T	1			
34	10	47462	SCREW, MOUNT BRACKET TO T	1			
35	13	32993	LOCKWASHER, MOUNT BRACKE	2			
36	32	47516 4	HOSE, TRANSMISSION TO OIL C	1			
37	22	47630	ELBOW, TRANSMISSION HOSE	1			
38		47472	LEVER, SHIFT - TRANSMISSION	1			
39	12	20722	WASHER, SHIFT LEVER TO TRA	1			
40	13	26993	LOCKWASHER, SHIFT LEVER TC	1			
41	11	20882	NUT, SHIFT LEVER TO TRANSMI	1			