



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		47493A 2	DISTRIBUTOR ASSEMBLY, COM	1		
2	393	3230	CAP, DISTRIBUTOR	1		
3		49924	ROTOR, DISTRIBUTOR	1		
4		48789A 1	HOUSING ASSEMBLY, ADAPTC	1		
5	17	20032	PIN, DOWEL - ADAPTER HOL	2		
6	54	48575	CLAMP, CAP TO ADAPTOR HOL	2		
7	10	37572	SCREW, DISTRIBUTOR CLAMP	2		
8	13	26996	LOCKWASHER, DISTRIBUTOR	2		
9	393	2918A 6	TRIGGER ASSEMBLY	1		
10	10	47618	SCREW, TRIGGER ATTACHING	4		
11	13	26996	LOCKWASHER, TRIGGER ATT	4		
12	10	26595	SCREW, ADAPTOR HOUSING F	4		
13	13	26995	LOCKWASHER, ADAPTOR HOL	4		
14	43	47619	GEAR, DISTRIBUTOR	1		
15	17	47617	ROLL PIN, GEAR TO DISTRIBU	1		
16		52618	JUMPER CABLE, GROUND	1		
17	27	52184	GASKET, DISTRIBUTOR	1		
18		52185	CLAMP, DISTRIBUTOR TO INTAK	1		
19	10	54528	SCREW, DISTRIBUTOR CLAMP	1		
20	10	33231	SCREW, DISTRIBUTOR GROUND	1		
21		47862A 1	LEAD ASSEMBLY, DISTRIBUTOR	1		
22		32782	RETAINER, HIGH TENSION LEAC	1		
22		32783	RETAINER, HIGH TENSION LEAC	2		
22		32784	RETAINER, HIGH TENSION LEAC	2		
23		46281	RETAINER, HIGH TENSION LEAC	4		
24	10	31294	SCREW, RETAINER TO CYLINDE	2		
25		47861A 1	LEAD ASSEMBLY, HIGH TENSIO	1		
25		47861A 3	LEAD ASSEMBLY, HIGH TENSIO	2		
25		47861A 4	LEAD ASSEMBLY, HIGH TENSIO	1		
25		47861A 5	LEAD ASSEMBLY, HIGH TENSIO	1		
25		47861A 6	LEAD ASSEMBLY, HIGH TENSIO	2		
25		47861A 7	LEAD ASSEMBLY, HIGH TENSIO	1		
26		47604A 1	PROTECTOR, SPARK PLUG	8		
27	33	57769	SPARK PLUG, (AC V-40K)	8		