



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		48504	ADAPTOR, OIL FILTER	1		
2	22	36373	PLUG, PIPE - OIL FILTER ADAPTI	1		
3	12	48506	WASHER, INSULATOR - ADAPTC	1		
4	10	47954	SCREW, OIL FILTER ADAPTOR T	2		
5	13	37459	LOCKWASHER, OIL FILTER ADAF	2		
6	12	25970	WASHER, OIL FILTER ADAPTOR	2		
7	22	32802	PLUG, PIPE - OIL FILTER ADAPT(1		
8	32	53311A 1	HOSE, OIL RETURN (16")	1		
8	32	48244A 1	HOSE, OIL INLET (16 1/2")	1		
9	22	48245	CONNECTOR, OIL FILTER ADAP1	2		
10		32720	FITTINGM, OIL FILTER TO ADPA	1		
11		52731	OIL FILTER	1		
12		47486	ADAPTOR, OIL	1		
13		47543	HOUSING, OIL TRANSFER	1		
14	10	22698	SCREW, OIL TRANSFER HOUSIN	3		
15	25	38101	"O" RING, OIL TRANSFER HOUS	2		
16	10	47409	SCREW, OIL ADAPTOR TO CYLIN	1		
17	12	47523	WASHER, OIL ADAPTOR SCREW	1		
18	12	47524	WASHER, SEALING - OIL ADAPT	1		
19		54785	ADAPTOR ASSEMBLY, OIL FILTE	1		
20	10	54786	SCREW, ADAPTOR TO CYLINDEI	2		
21	25	33756	RING, SEALING - ADAPTOR AND	1		