



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	47455	STARTER MOTOR ASSEMBLY (S	1	SEE NOTE	
1	50	47454	STARTER MOTOR ASSEMBLY (O	1	SEE NOTE	
2	10	47462	SCREW, STARTER MOTOR TO C	2		
3	13	32993	LOCKWASHER, STARTER MOTO	2		
4	11	28517	NUT, STARTER TERMINAL (3/8")	1		
5	13	26395	LOCKWASHER, STARTER TERM	1		
6	11	26419	NUT, STARTER TERMINAL (#8)	1		
7		36525	WATER TEMPERATURE SENDEI	1		
8	13	26396	LOCKWASHER, WATER TEMPEF	1		
9	11	20645	NUT, WATER TEMPERATURE SE	1		
10		52676	SWITCH, ELECTRIC CHOKE	1		
11	13	26396	LOCKWASHER, CHOKE SWITCH	1		
12	11	20645	NUT, CHOKE SWITCH TERMINAL	1		
13		34623	OIL PRESSURE SENDER ASSEM	1		
14	13	26396	LOCKWASHER, OIL PRESSURE S	1		
15	11	20645	NUT, OIL PRESSURE SENDER T	1		
16	22	46932	ELBOW, OIL PRESSURE SENDEF	1		
17	22	38992	NIPPLE, OIL PRESSURE SENDEF	1		
18		49607	BATTERY CABLE (NEGATIVE)	1	STERN DRIVE	
18		49608	BATTERY CABLE (POSITIVE)	1	STERN DRIVE	
19		56045	ALTERNATOR ASSEMBLY (SEE M	1		
20		47498	BRACE ALTERNATOR ADJUSTIN	1		
21	10	29198	SCREW, ALTERNATOR BRACE T	1		
22	12	26168	WASHER, ALTERNATOR BRACE	1		
23	10	27165	SCREW, ALTERNATOR BRACE T	1		
24	13	35048	LOCKWASHER, ALTERNATOR BI	1		
25	12	20553	WASHER, ALTERNATOR BRACE	1		
26		48104	BRACKET, ALTERNATOR MOUN	1		
27	10	21077	SCREW, ALTERNATOR BRACKE	3		
28	13	35048	LOCKWASHER, ALTERNATOR BI	3		
29	10	48308	SCREW, ALTERNATOR TO ALTE	1		
30	23	33186	BUSHING, ALTERNATOR BRACK	1		
31	12	20553	WASHER, ALTERNATOR BRACK	2		
32	11	23161	NUT, ALTERNATOR BRACKET SI	1		
33	10	20055	SCREW, GROUND WIRE TO ALT	1		
34	13	26396	LOCKWASHER, GROUND WIRE :	1		
35	12	30164	WASHER, GROUND WIRE SCRE	1		