



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		47753A 3	TRANSMISSION ASSEMBLY	1		
2	22	47629	ELBOW, TRANSMISSION TO OI	1		
3	23	36159	BUSHING, REDUCING - TRANS	1		
4	22	47631	ELBOW, TRANSMISSION TO OI	1		
5		47339A 4	ENGINE COUPLING ASSEMBLY	1		
6	19	47463	PLUG, EXPANSION - ENGINE	1		
7	23	58464	SLEEVE, ENGINE COUPLING	1		
8	53	47469	RING, SNAP - BALL BEARING	1		
9	23	47471	BEARING, ENGINE COUPLING	1		
10	24	47755	SPRING, GUIDE - ENGINE CO	1		
11	30	47470	BALL BEARING, ENGINE COU	1		
12		47333A 1	HOUSING ASSEMBLY, BEARIN	1		
13	25	47756	"O" RING, BEARING SUPPOR	1		
14	26	47465	OIL SEAL, BEARING SUPPOR	1		
15	31	47468	ROLLER BEARING, BEARING	1		
16	27	47903	GASKET, BEARING SUPPORT	1		
17	10	47462	SCREW, BEARING SUPPORT F	8		
18	13	32993	LOCKWASHER, BEARING SUP	8		
19		48461	ADAPTOR, OIL LEVEL GAUGE TL	1		
20	25	48462	"O" RING, OIL LEVEL TUBE ADA	1		
21		48463	TUBE, OIL LEVEL GAUGE	1		
22		48464	GAUGE, OIL LEVEL	1		
23	25	35276	"O" RING, OIL LEVEL GAUGE	1		
24		48466	BRACKET, MOUNTING - OIL LEV	1		
25	10	34290	SCREW, MOUNTING BRACKET T	2		
26	13	26992	LOCKWASHER, MOUNTING BRA	2		
27	54	48465	CLAMP, OIL LEVEL GAUGE TUBE	1		
28	10	20776	SCREW, OIL LEVEL GAUGE TUBI	1		
29	13	26992	LOCKWASHER, OIL LEVEL GAUC	1		
30	11	21825	NUT, OIL LEVEL GAUGE TUBE CI	1		
31		47338A 1	BRACKET ASSEMBLY, TRANSMI	1		
32		35852	MOUNT, TRANSMISSION MOU	1		
33	10	38197	SCREW, MOUNT BRACKET TO T	1		
34	10	47462	SCREW, MOUNT BRACKET TO T	1		
35	13	32993	LOCKWASHER, MOUNT BRACKE	2		
36	32	47516 4	HOSE, TRANSMISSION TO OIL C	1		
37	22	47630	ELBOW, TRANSMISSION HOSE	1		
38		47472	LEVER, SHIFT - TRANSMISSION	1		
39	12	20722	WASHER, SHIFT LEVER TO TRA	1		
40	13	26993	LOCKWASHER, SHIFT LEVER TC	1		
41	11	20082	NUT, SHIFT LEVER TO TRANSMI	1		