



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-		109 AS LI	TRANSMISSION ASSEMBLY, COM	1	B-70711A6 TRANSMISSION ASS 22
1		70711A 3	HOUSING ASSEMBLY, TRANSM	1	
2			PIN, SPRING - TRANSMISSIO	1	18
2A	22	47902	VENT, TRANSMISSION HOUS	1	
3		64090A 1	TUBE ASSEMBLY, DIPSTICK	1	
4		63037	DIPSTICK	1	
5			BALL, TRANSMISSION HOUS	1	18
6	22	36373	PLUG, PIPE - TRANSMISSIO	1	
7	10	34354	SCREW, TRANSMISSION HOUS	4	NOT INCLUDED WITH TRANSM
7	10	32132	SCREW, TRANSMISSION HOUS	2	NOT INCLUDED WITH TRANSM
8	13	35048	LOCKWASHER, TRANSMISSIO	6	NOT INCLUDED WITH TRANSM
9			"O" RING, PUMP TO TRANSMI	2	17
10			"O" RING, PUMP TO TRANSMI	1	17
11			"O" RING, PUMP TO TRANSMI	1	17
12		62718A 2	PUMP ASSEMBLY	1	
13			SEAL, PUMP COVER	1	17
14	22	20025	PLUG, PUMP	2	
15		62722	PISTON, RELIEF VALVE	1	
16	24	62790	SPRING, RELIEF VALVE PISTO	1	
17			"O" RING, PUMP PLUG (3/4" O.	2	17
18	19	62753	PLUG, PUMP	2	
19	10	35386	SCREW, PUMP TO TRANSMISS	5	
19	10	31984	SCREW, PUMP TO TRANSMISS	2	
20			WASHER, SEALING - PUMP SC	7	17
21			"O" RING, PUMP (3 7/16" O.D.)	1	17
22		62662A 1	PUMP ASSEMBLY, GEROTOR	1	SEE NOTE
22		74906A 1	PUMP ASSEMBLY, GEROTOR	1	SEE NOTE
23	10	60300	SCREW, PUMP ATTACHING (3/	7	
24	13	26992	LOCKWASHER, PUMP SCREW	7	
25		63126	FLANGE ASSEMBLY, OIL COOL	1	
26	10	66137	SCREW, FLANGE TO TRANSMI	1	
27	13	26992	LOCKWASHER, FLANGE SCRE	1	
28			"O" RING, FLANGE TO TRANSM	1	17
29		66515A 1	COVER ASSEMBLY, OIL COOLE	1	
30	27	62724	GASKET, OIL COOLER COVE	1	
31	22	36373	PLUG, PIPE - COVER	1	
32	11	21612	NUT, JAM - OIL COOLER	2	
33			"O" RING, OIL COOLER JAM	2	17
34	10	60300	SCREW, COVER TO TRANSMIS	4	
35	13	26992	LOCKWASHER, COVER SCREW	4	
36		62740A 2	CONTROL VALVE ASSEMBLY	1	