



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	1571	4847A 5	DRIVE SHAFT HOUSING ASSEM	1	
2	10	21934	SCREW, SET - DRIVE SHAFT H	1	
3	26	62818	OIL SEAL, DRIVE SHAFT HOUS	1	
4	25	62817	"O" RING, DRIVE SHAFT HOUS	1	
5	27	54014	GASKET, DRIVE SHAFT HOUSI	1	
6	16	54674	STUD, DRIVE SHAFT HOUSING	6	
7	11	34933	NUT, DRIVE SHAFT HOUSING S	6	
8	19	47579	PLUG, TRIM TAB HOLE - DRIVE	1	
9	10	28634	SCREW, VENT - DRIVE SHAFT H	1	
10	12	20260	WASHER, SEALING - VENT SCRE	1	
11	24	48442	SPRING, TENSION - OIL RELEAS	1	
12	20	48219	CHECK VALVE, OIL RELEASE	1	
13	25	48452	QUAD RING, OIL RELEASE CHEC	1	
14	27	66925	GASKET, CHECK VALVE GUIDE	1	
15		54168	GUIDE, CHECK VALVE	1	
16	10	22523	SCREW, CHECK VALVE GUIDE T	3	
17	31	38356A 1	TAPERED ROLLER BEARING AS:	1	
18	12	62795	TAB WASHER, DRIVE SHAFT	1	
19	13	62788	LOCKWASHER, DRIVE SHAFT	1	
20	11	62794	NUT, DRIVE SHAFT	1	
21		62787A 1	COUPLING ASSEMBLY, OIL SLINI	1	8
22	15	39899A 1	SHIM ASSEMBLY, ROLLER BEAR	AR	8
23	12	62797	WASHER, ROLLER BEARING TO	1	8
24	15	32061A 1	SHIM ASSEMBLY, TAPERED ROL	AR	
25	31	62799A 1	TAPERED ROLLER BEARING AS:	1	
26	43	62879	GEAR, DRIVEN - DRIVE SHAFT	1	
27	45	62793	DRIVE SHAFT	1	
28	25	67202	"O" RING, TOP COVER	1	
29		62911	COVER, TOP	1	
30	10	35047	SCREW, COVER TO DRIVE SHAF	4	
31		62782A 1	UNIVERSAL JOINT ASSEMBLY, F	1	SERIAL 00000000-04345438
31		62782A 2	UNIVERSAL JOINT ASSEMBLY, F	1	SERIAL 04345439-09999999
32		62782	YOKE, UNIVERSAL JOINT (GEAF	1	
33		58749	CROSS AND BEARING ASSEME	2	SERIAL 00000000-04345438
33		75832	CROSS AND BEARING ASSEME	2	SERIAL 04345439-09999999
34		39383	SOCKET, CENTER - UNIVERSA	1	
35		62784	YOKE, UNIVERSAL JOINT (COU	1	
36	24	62727	SPRING COMPRESSION - UNIV	1	
37	15	62833A 1	SHIM ASSY, ROLLER BEARING	AR	
38	31	38356A 1	TAPERED ROLLER BEARING AS:	1	
39	22	62789	SPACER, TAPERED ROLLER BE	1	