



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		99798A 9	EXHAUST MANIFOLD (CONVENT	1		
1		99798A16	EXHAUST MANIFOLD (DIGITAL IC	1		
2	22	32802	PLUG, PIPE - EXHAUST MANIF(1		
3	22	36382	PLUG, PIPE - EXHAUST MANIF(1		
4	10	52143	SCREW, EXHAUST MANIFOLD TI	5		
5	12	20553	WASHER, EXHAUST MANIFOLD	5		
6		60252A 2	END CAP/CONNECTOR, EXHAUS	1		
7	27	48043	GASKET, END CAP	1		3,4
8	10	35386	SCREW, END CAP TO EXHAUST	4		
9		99179A 1	END CAP/LIFTING EYE, EXHAUS	1		
10	27	73814 1	GASKET, END CAP	1		3,4
11	10	59645	SCREW, END CAP TO EXHAUST	4		
12	54	47483	CLIP, END CAP SCREW	1		
13	27	96429	GASKET, EXHAUST MANIFOLD T	1		3,4
14		12076A 1	EXHAUST ELBOW ASSEMBLY	1		
15	27	99777 1	GASKET, EXHAUST ADAPT	1		3,4
16	10	66863 1	SCREW, EXHAUST ELBOW	2		
17	32	42850 64	HOSE, INLET (3/4" I.D.)	1	WITH OUT POWER STEERING	
18	54	32523	CLAMP, INLET HOSE ATTACHING	2	WITH OUT POWER STEERING	
19	32	42851	HOSE, COOLER TO DRIVE UNIT	1	- WITH POWER STEERING	
20	32	44107	HOSE, COOLER OT HOUSING	1	- WITH POWER STEERING	
21	54	32780	CLAMP, HOSE ATTACHING	4	- WITH POWER STEERING	
22		96783A 1	OIL COOLER	1	- WITH POWER STEERING	
23	54	32533	CLAMP, OIL COOLER ATTACHING	2	- WITH POWER STEERING	
24		96762A 1	BRACKET, OIL COOLER	1	- WITH POWER STEERING	
25	10	35386	SCREW, OIL COOLER BRACKET	2	- WITH POWER STEERING	
26		47587A 2	HOUSING ASSEMBLY, CYL. HEAT	1		
27	22	32803	PIPE PLUG, HOUSING	1		
28	22	32802	PIPE PLUG, HOUSING	1		
29	27	33680	GASKET, HOUSING	1		3,4
30	10	90059	SCREW, HOUSING TO CYLINDEF	1		
30	10	90187	SCREW, HOUSING TO CYLINDEF	1		
31	22	42853	ELBOW, HOUSING	1		
32		59078	THERMOSTAT	1		
33	27	47590 1	GASKET, THERMOSTAT COVER	1		3,4
34		60372A 2	COVER ASSEMBLY, THERMOSTA	1		
35	10	79654	SCREW, THERMOSTAT COVER	2		
35	10	60374	SCREW, THERMOSTAT COVER	2		
36		12423	LIFTING EYE	1		
37	32	52481	HOSE, HOUSING TO END CAP/C	1		
38	54	32780	CLAMP, HOSE ATTACHING	2		