



**USE WITH  
 2-PIECE  
 EXHAUST  
 ELBOW**

120-140-2 5L-3.0L

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		95862A	5 EXHAUST MANIFOLD (USE WITH	1		
1		99798A	9 EXHAUST MANIFOLD (USE WITH	1		
2	16	56826	STUD, EXHAUST MANIFOLD TO	4		
3	22	32802	PLUG, PIPE - EXHAUST MANIF	1		
4	22	36382	PLUG, PIPE - EXHAUST MANIF	1		
5	10	52143	SCREW, EXHAUST MANIFOLD TI	4		
6	12	20553	WASHER, EXHAUST MANIFOLD	6		
7	16	96109	STUD, EXHAUST MANIFOLD TO	2		
8	11	24883	NUT, EXHAUST MANIFOLD STUC	2		
9		60252A	2 END CAP/CONNECTOR, EXHAUS	1		
10	27	48043	GASKET, END CAP	1		3,4
11	10	35386	SCREW, END CAP TO EXHAUST	4		
12		99179A	1 END CAP/LIFTING EYE, EXHAUS	1		
13	27	73814	GASKET, END CAP	1		3,4
14	10	59645	SCREW, END CAP TO EXHAUST	4		
15	54	47483	CLIP, END CAP SCREW	1		
16	10	96430	SCREW, SHOULDER-CABLE ATT	1		
17	27	96429	GASKET, EXHAUST MANIFOLD T	1		3,4
18		76325A	2 EXHAUST ELBOW ASSEMBLY	1		
19	22	32802	PLUG, PIPE - EXHAUST ELBOW	1		
20	22	33198A	1 PLUG, EXHAUST ELBOW	4		
21	27	99777	GASKET, EXHAUST ADAPTOR	2		3,4
22		12076A	1 EXHAUST ADAPTOR	1	EXHAUST ADAPTER IS SUPERSE	
23	10	72094	SCREW, EXHAUST ELBOW TO A	2		
23	10	34354	SCREW, EXHAUST ELBOW TO A	2		
24	13	35048	LOCKWASHER, EXHAUST ELBOV	4		
25	13	35048	LOCKWASHER, EXHAUST MANIF	4		
26	11	24883	NUT, EXHAUST MANIFOLD STUC	4		
27	32	47642	HOSE, INLET (5/8" I.D.) - W/O PC	1		
27	32	42850	64 HOSE, INLET (3/4" I.D.) - W/O PC	1		
28	54	32523	CLAMP, INLET HOSE ATTACHING	2		
29	32	96911	HOSE, COOLER OT DRIVE UNIT	1	- W/POWER STEERING	
30	32	96764	HOSE, COOLER TO HOUSING - 5	1	- W/POWER STEERING	
29	32	42851	HOSE, COOLER OT DRIVE UNIT	1	- W/POWER STEERING	
30	32	44107	HOSE, COOLER TO HOUSING - 3	1	- W/POWER STEERING	
31	54	32523	CLAMP, HOSE ATTACHING	4	- W/POWER STEERING	
32		96783A	1 OIL COOLER	1	- W/POWER STEERING	
33	54	32533	CLAMP, OIL COOLER ATTACHING	2	- W/POWER STEERING	
34		96762A	1 BRACKET, OIL COOLER	1	- W/POWER STEERING	
35	10	35386	SCREW, OIL COOLER BRACKET	2	- W/POWER STEERING	
36		47697A	2 HOUSING ASSEMBLY	1		