



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	99417A 2	STARTER MOTOR	1		
2		98192	SHIM, STARTER MOTOR	1		
3	10	94435	BOLT, STARTER MOTOR MOUN	1		
4	10	812509184	BOLT, STARTER MOTOR MOUN	1		
5		87300T	BRACKET, STARTER MOTOR	1		
6	10	12244	SCREW, STARTER MOTOR BRAI	1		
7	85	79695	INSULATOR	1		
8	11	32219	NUT, BATTERY TERMINAL (3/8-1	OPT		
8	11	15874	NUT, BATTERY TERMINAL (10M	OPT		
9	11	26419	NUT, SOLENOID SWITCH TERMIN	2		
9	11	40021	NUT, SOLENOID SWITCH TERMI	2		
10	13	26995	LOCKWASHER, SOLENOID SWI	2		
11	11	72008	NUT, STARTERMOTOR TERMIN	1		
12	88	79023A91	FUSE ASSEMBLY (909 AMP)	1	NOT USED ON LATER ENGINES	
13	12	96457	WASHER, FUSE STUD	1	NOT USED ON LATER ENGINES	
14	13	26992	LOCKWASHER, FUSE STUD	1	NOT USED ON LATER ENGINES	
15	11	21825	NUT, FUSE STUD	1	NOT USED ON LATER ENGINES	
16		78403A 2	ALTERNATOR (MOTOROLA)-37 A	1		
16		92497A 3	ALTERNATOR (MOTOROLA)-55 A	1		
17		58333	BRACE, ALTERNATOR TO EXHAU	1		
18	10	29198	SCREW, ALTERNATOR BRACE T	1		
20	12	26168	WASHER, ALTERNATOR BRACE	1		
21	16	54177	STUD, BRACE TO MANIFOLD-STI	1		
22	11	23161	NUT, ALTERNATOR BRACE STU	1		
23	10	98261	SCREW, BRACE TO MANIFOLD (E	1		
24	12	20553	WASHER, ALTERNATOR BRACE	1		
25	12	96457	WASHER, BOOT ATTACHING (PF	1		
26	13	21272	LOCKWASHER, ALTERNATOR TI	1		
27	11	64015	NUT, ALTERNATOR TERMINAL	1		
28		57908 11	TUBING, ALTERNATOR LEADS	2		
29	10	37626	SCREW, ALTERNATOR TO BRAC	1		
30	12	28105	WASHER, ALTERNATOR SCREW	1		
31	12	20553	WASHER, ALTERNATOR TO BRZ	1		
32	23	63894	SPACER, ALTERNATOR TO BRAI	1		
33	11	23161	NUT, ALTERNATOR SCREW	1		
34		16738A 1	BRACKET, ALTERNATOR	1		
35	16	56826	STUD, ALTERNATOR BRACKET	2		
36	12	20553	WASHER, BRACKET STUD - STU	2		
37	11	23161	NUT, BRACKET STUD - STUD AT	2		
38	10	12244	SCREW, BRACKET	2		