



A - Ignition Components

- 1 - Distributor
- 2 - Ignition Coil
- 3 - Shift Cutout Switch

B - Starting Charging and Choke Components

- 1 - Alternator
- 2 - Electric Choke
- 3 - Ground Stud
- 4 - Starter Motor
- 5 - Starter Slave Solenoid
- 6 - Circuit Breaker

C - Audio Warning Components

- 1 - Water Temperature
- 2 - Drive Unit Gear Lube Monitor
- 3 - Oil Pressure Switch

D - Instrumentation Components

- 1 - Oil Pressure Sender
- 2 - Water Temperature Sender
- 3 - Trim Sender

NOTE: Gray lead for use with service tachometer.

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-	84	861413A 2	WIRING HARNESS, Engine	1	SN# 0L382121 & Below	
-	84	862081A 2	WIRING HARNESS, Engine	1	SN# 0L382122 & Up	
-		817374A01	CONNECTOR, Delco EST Distribut	1		1