



8137

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		58333	BRACE, Alternator Adjusting	1		
2	10	29198	SCREW AND LOCKWASHER, (.31	1		
3	12	26168	WASHER	1		
4	10	98261	SCREW, (.375-16 x .750)	1		
5	12	20553	WASHER, (.406 x .734 x .063)	1		
6	10	37626	SCREW, (0.375-24 X 4.25)	1		
7	12	28105	WASHER	1		
8	23	63894	SPACER	1		
9	12	20553	WASHER, (.406 x .734 x .063)	1		
10	11	23161	NUT, (.375-24)	1		
11		16738A 1	BRACKET, Alternator	1		
12	10	12244	SCREW, (.375-16 x 1.00)	2		
13		<a href="#">817119A 4</a>	ALTERNATOR	1	(See "Alternator Breakdown, Manu	
14	12	96457	WASHER	1		
15	13	26996	LOCKWASHER, (#10)	1		
16	11	79989	NUT, (#10-24)	1		
17	13	26992	LOCKWASHER, (.250)	1		
18	11	94330	NUT, (.250-20)	1		
19	54	78945	J CLAMP, Harness Support	1		
20	10	98261	SCREW, (.375-16 x .750)	1		