



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	735	5949	PISTON AND PISTON PIN ASSEM	AR		28
1	735	5950	PISTON AND PISTON PIN ASSEM	AR		28
2	39	65153	RING, PISTON-8 SETS (STANDAF	8		
2	39	67126	RING, PISTON-8 SETS (.030 O.S.)	AR		28
3/4	23	15960	BEARING SET, CRANKSHAFT (S1	1		
3/4	23	15960 10	BEARING SET, CRANKSHAFT (.0	1		
3/4	23	15960 20	BEARING SET, CRANKSHAFT (.0	1		
5	17	35312	PIN, DOWEL-REAR BEARING CAI	1		
6	26	58203	OIL SEAL, REAR BEARING CAP	2		10
7	222	6355	FLYWHEEL (12-3/4" DIA.) MR	1		
7	230	9425	FLYWHEEL (14" DIA.) MR	1		10
7	222	9520	FLYWHEEL (14" DIA.) MR	1		9
7	230	4614	FLYWHEEL TR	1		10
7	222	9558	FLYWHEEL TR	1		9
8		76850A 2	ENGINE COUPLING ASSEMBLY	1	MR CAST COUPLING	
9	16	98532A 1	STUD, COUPLING TO FLYWHEEL	6	MR CAST COUPLING	
10	12	34567	WASHER, COUPLING STUD	6	MR CAST COUPLING	
11	11	98533	NUT, COUPLING STUD	6	MR CAST COUPLING	
12	10	49845	SCREW, FLYWHEEL TO CRANKE	6		
13	13	39131	LOCKWASHER, FLYWHEEL SCR	6		
14		47607A 1	DRIVE PLATE, FLYWHEEL (TR)	1		
15	10	35091	SCREW, DRIVE PLATE TO FLYW	6		
16	13	35048	LOCKWASHER, DRIVE PLATE SC	6		
17		12632A 4	COUPLING ASSEMBLY	1	MR STAMPED COUPLING	
18		26901	RUBBER BUMPER	3	MR STAMPED COUPLING	
19	10	14883	SCREW, COUPLING	3	MR STAMPED COUPLING	
20	12	13510	WASHER, COUPLING SCREW	3	MR STAMPED COUPLING	
21	10	49845	SCREW, FLYWHEEL TO CRANKE	6	MR STAMPED COUPLING	
22	614	5951	CONNECTING ROD ASSEMBLY	8		
23	10	85802	BOLT, CONNECTING ROD CAP	16		
24	11	37493	NUT, CONNECTING ROD CAP E	16		
25	23	15961	BEARING SET, CONNECTING RO	1		
25	23	15961 10	BEARING SET, CONNECTING RO	1		
25	23	15961 20	BEARING SET, CONNECTING RO	1		
26	429	6541	CRANKSHAFT	1		10
26	429	9601	CRANKSHAFT	1		9
27	28	34466	KEY, CRANKSHAFT PULLEY ANC	2		
28	17	43504	DOWEL PIN, CRANKSHAFT	1		