



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		90747A 3	DISTRIBUTOR ASSEMBLY	1	
2		43557A 1	CAP, DISTRIBUTOR	1	
3	10	90926	SCREW, DISTRIBUTOR CAP	4	
4	27	98242	GASKET, DISTRIBUTOR CAP	1	
5		13524A 3	ROTOR	1	
6		42862	SENSOR WHEEL	1	
7	10	11252	SCREW, SENSOR WHEEL	3	
8	87	91019A 3	SENSOR ASSEMBLY	1	
9	10	47618	SCREW, SENSOR	2	
10	12	27736	WASHER, SENSOR SCREW	2	
11	43	47619	GEAR, DRIVE	1	
12	17	47617	PIN, DRIVE GEAR	1	
13	27	52184	GASKET, DISTRIBUTOR	1	17
14		52185	CLAMP, DISTRIBUTOR TO INTAK	1	
15	10	27165	SCREW, DISTRIBUTOR (7/8")	1	
16	12	30164	WASHER, DISTRIBUTOR TERMINI	2	
17	13	26996	LOCKWASHER, DISTRIBUTOR T	2	
18	11	68219	NUT, DISTRIBUTOR TERMINAL (	2	
19	84	42841A10	LEAD ASSEMBLY, DISTRIBUTOR	1	
20	84	43376A 4	SPARK PLUG WIRE KIT	1	
21	85	63709A 1	BOOT ASSEMBLY, SPARK PLUI	8	
22	33	59571	SPARK PLUG (NGK-BR6FS)	8	
23		54676	RETAINER, HIGH TENSION LEAC	2	
24		32783	RETAINER, HIGH TENSION LEAC	2	
25		32784	RETAINER, HIGH TENSION LEAC	2	
26	392	7803A 4	COIL, IGNITION	1	
27		77294	BRACKET, IGNITION COIL	1	
28	10	41408	SCREW, BRACKET (1-1/2")	1	
29	12	30164	WASHER, IGNITION COIL TERMI	2	
30	13	26996	LOCKWASHER, INGITION COIL T	2	
31	11	68219	NUT, IGNITION COIL TERMINAL	2	
32	10	34500	SCREW, IGNITION COIL (3/4")	2	
33	13	26993	LOCKWASHER, IGNITION COIL S	2	
34	12	20084	WASHER, IGNITION COIL SCREW	2	
35	13	35048	LOCKWASHER, DISTRIBUTOR S	1	
36	12	20553	WASHER, DISTRIBUTOR SCREW	1	