



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		87114A 8	EXHAUST MANIFOLD ASSEMBLY	2	
2	16	49545	STUD, EXHAUST MANIFOLD T	4	
3	22	33198A 1	PLUG, EXHAUST MANIFOLD	4	
4	22	48118	PLUG, PIPE -M EXHAUST MANI	4	
5	27	33395	GASKET, EXHAUST MANIFOLD T	2	17
6	10	53728	SCREW, EXHAUST MANIFOLD (4	8	
7	12	20553	WASHER, EXHAUST MANIFOLD	8	
8	22	87238	DRAIN COCK, EXHAUST MANIFO	2	
9	22	36305	ELBOW, EXHAUST MANIFOLD (9	2	
10	27	87105	GASKET, ELBOW	2	17
11		44194	ADAPTOR, EXHAUST ELBOW	2	
12	27	48042	GASKET, ADAPTOR TO ELBOW	2	17
13	16	93431	STUD, ADAPTOR TO EXHAUST E	2	
13	16	57981	STUD, ADAPTOR TO EXHAUST E	2	
14	10	60992	SCREW, ADAPTOR	4	
15		72963A 7	EXHAUST ELBOW ASSEMBLY (P	1	
15		72963A 8	EXAHUST ELBOW ASSEMBLY (S	1	
16	22	32802	PLUG, PIPE - EXHAUST ELBOW	2	
17	32	58616A 2	TUBE, WATER SEPARATION	2	
18	22	36305	FITTING, EXHAUST ELBOW (90 C	1	
19	13	35048	LOCKWASHER, EXHAUST MANIF	8	
20	11	49838	NUT, EXHAUST MANIFOLD STU	8	
21	22	92499	ELBOW, EXHAUST MANIFOLD (4	2	
22	32	98090 4	HOSE, EXHAUST (TR)	2	