



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	46	72774A32	WATER PUMP ASSEMBLY	1		
2	46	72774A40	BODY, WATER PUMP	1		
3		87631A 1	COVER, WATER PUMP	1		
4	10	73275	SCREW, WATER PUMP (2-7/8")	5		
5	12	20084	WASHER, COVER SCREW	5		
6	27	94915	GASKET, COVER TO OUTER W	1		
7		94916	WEAR PLATE, OUTER	1		
8	27	94914	GASKET, BODY TO WEAR PLA	2		
9	19	59504	PLUG, IMPELLER	1		
10	47	59362	IMPELLER	1		
11	28	56662	KEY, IMPELLER DRIVE	1		
12		94576	WEAR PLATE, INNER	1		
13	25	94288	QUAD RING, PUMP HOUSING	1		
14	46	94913A 1	PUMP HOUSING ASSEMBLY	1		
15	26	90562	OIL SEAL, WATER PUMP SH	2		
16	30	72961	BALL BEARING, WATER PUM	2		
17		59501A 1	SHAFT, WATER PUMP	1		
18	53	23720	SNAP RING, BALL BEARING F	1		
19	26	72785	OIL SEAL, WATER PUMP SH	1		
20		47530	HUB, WATER PUMP PULLEY	1		
21		73798A 1	PULLEY, WATER PUMP	1		
22	10	47277	SCREW, PULLEY (3/4")	4		
23	13	39107	LOCKWASHER, PULLEY SCREW	4		
24	13	39107	LOCKWASHER, WATER PUMP S	3		
25	11	21908	NUT, WATER PUMP SCREW	3		
26		89535	BRACKET, WATER PUMP	1		
27	10	34353	SCREW, WATER PUMP BRACKE	2		
28	13	35048	LOCKWASHER, WATER PUMP B	2		
29	12	34714	WASHER, WATER PUMP BRACK	1		
30		89609	BRACE, WATER PUMP ADJUSTII	1		
31	10	26487	SCREW, ADJUSTING BRACE	1		
32	13	35048	LOCKWASHER, ADJUSTING BRA	1		
33	12	34714	WASHER, ADJUSTING BRACE SI	1		
34	10	35786	SCREW, ADJUSTING BRACE (1")	1		
35	13	35048	LOCKWASHER, ADJUSTING BRA	1		
36	11	24883	NUT, ADJUSTING BRACE SCREW	1		
37	22	32802	PLUG, PIPE (FOR WATER PUMP	1		
38	57	44207	BELT, WATER PUMP	1		
39	32	61226 8	HOSE, PUMP TO FLYWHEEL HOI	1		
40	54	43510	CLAMP, HOSE	2		