



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		47810A19	TRANSMISSION (DIRECT DRIVE)	1		
2	10	60179	SCREW, TRANSMISSION TO EN	6		
3	13	32993	LOCKWASHER, SCREW AND STI	6		
4	32	47516 12	HOSE, TRANSMISSION/COOLER	1		
4	32	47516 3	HOSE, TRANSMISSION/COOLER	1		
5	22	63824	ELBOW, HOSE (90 DEGREES EX	1		
6	22	47629	ELBOW, HOSE (90 DEGREES)	1		
7		12128	LEVER, SHIFT TRANSMISSION	1		
8	16	63335	STUD, SHIFT LEVER	1		
9	12	39143	WASHER, SHIFT LEVER STUD	1		
10	11	20361	NUT, SHIFT LEVER STUD	1		
11	12	29245	WASHER, SHIFT	2		
12	12	20722	WASHER, TRNASMISSION LEVE	1		
13	13	26993	LOCKWASHER, TRANSMISSION	1		
14	11	22053	NUT, TRANSMISSION LEVER ST	1		
15		41603	BRACKET, SHIFT	1		
16	10	34350	SCREW, SHIFT BRACKET TO TR	2		
17	12	45176	WASHER, SHIFT BRACKET SCRE	2		
18	16	63335	STUD, SHIFT BRACKET	1		
19	12	39143	WASHER, SHIFT BRACKET STU	1		
20	11	20361	NUT, SHIFT BRACKET STUD	1		
21	12	21631	WASHER, SHIFT BRACKET STU	2		
22	23	31866	SPACER, SHIFT BRACKET STUD	1		
23	11	20586	NUT, SHIFT BRACKET STUD	2		