



MC0001

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	12177A 2	STARTER MOTOR ASSEMBLY	1		
2	10	94435	SCREW, STARTER TO BLOCK (4-	2		
3		12404	BRACE, STARTER MOTOR	1		
4	12	29245	WASHER, STARTER MOTOR STI	2		
5	11	56374	NUT, STARTER MOTOR STUD	1		
6	10	35765	SCREW, BRACE TO ENGINE (5/8	1		
7	13	26995	LOCKWASHER, STARTER TERM	2		
8	11	26419	NUT, STARTER TERMINAL (#8)	2		
9		92497A 3	ALTERNATOR (55 AMP)	1		
10	13	26996	LOCKWASHER, ALTERNATOR TI	1		
11	12	96457	WASHER, ALTERNATOR TERMINI	1		
12	11	30968	NUT, ALTERNATOR TERMINAL (	1		
13	13	21272	LOCKWASHER, ALTERNATOR TEF	1		
14	11	20890	NUT, ALTERNATOR TERMINAL (	1		
15		85013	BRACE, ALTERNATOR ADJUSTI	1		
16	10	26487	SCREW, ALTERNATOR BRACE	1		
17	13	35048	LOCKWASHER, ALTERNATOR BI	1		
18	12	34714	WASHER, ALTERNATOR BRACE	1		
19	10	74824	SCREW, ALTERNATOR BRACE	1		
20	12	26168	WASHER, ALTERNATOR BRACE	1		
21	23	52095	SPACER, ALTERNATOR BRACE	1		
22		57908 11	TUBING, ALTERNATOR LEADS	2		
23		87115A 1	BRACKET, ALTERNATOR	1		
24	10	37612	SCREW, ALTERNATOR BRACKE	3		
25	13	35048	LOCKWASHER, ALTERNATOR BI	3		
26	10	48308	SCREW, ALTERNATOR (3-3/4")	1		
27	12	25970	WASHER, ALTERNATOR BRACK	3		
28	23	33186	BUSHING, ALTERNATOR BRACK	1		
29	11	23161	NUT, ALTERNATOR BRACKET SI	1		
30	85	79695	INSULATOR, BOOT - STARTER T	1		
31	13	39107	LOCKWASHER, ALTERNATOR BI	1		