



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	22	33821	CONNECTOR, FUEL LINE	1		
2	32	15937	FUEL LINE, FILTER TO PUMP	1		
3	22	14384	CONNECTOR, FUEL LINE TO FUE	1		
4	12	14470	WASHER, FUEL LINE CONNECT	1		
5		14351	FUEL PUMP	1		
6	12	20128	WASHER, FUEL PUMP STUD	1		
7	11	40063 3	NUT, FUEL PUMP STUD (5 MM)	1		
8	12	20670	WASHER, FUEL PUMP STUD	1		
9	11	40063 2	NUT, FUEL PUMP STUD (4 MM)	1		
10		15938	BRACKET, FILTER AND FUEL PU	1		
11	10	42113	SCREW, BRACKET	4		
12	12	26168	WASHER, BRACKET SCREW	4		
13	23	90523	SPACER, BRACKET SCREW	4		
14	54	18076 9	CLAMP, FUEL PUMP	2		
15	12	22886	WASHER, FUEL LINE CONNECT	1		
16	22	14383	CONNECTOR, FUEL LINE TO FUE	1		
17	32	15939A 1	FUEL LINE (4')	1		
18	22	14382A 1	FUEL FITTING ASSEMBLY	1		
19	22	32876	NIPPLE	1		
20	22	52930	TEE	1		
21		16516	TANK VALVE	1		
22	87	14355	SWITCH, OIL PRESSURE	1		
23	22	14475	NIPPLE	1		
24		13516 1	FUEL RAIL	2		
25		13518 1	SUPPORT, FUEL RAIL	4		
26	10	13684	SCREW, FUEL RAIL	8		
27	12	46101	WASHER, FUEL RAIL SCREW	8		
28	22	33821	CONNECTOR	3		
29	32	13601	FUEL LINE	1		
30		12026	REGULATOR, FUEL PRESSURE	1		
31	11	22339	NUT, FUEL PRESSURE REGULA	1		
32		14302	BRACKET, REGULATOR	1		
33	32	14474	FUEL LINE	1		
34	32	14473	FUEL LINE	1		
35	22	14472	FITTING	1		
36	22	36382	PLUG	1		
37		89876A 3	BASE, FUEL FILTER	1		
38	22	36382	PIPE PLUG, BASE	2		
39	10	26065	SCREW, BASE	2		
40	11	35814	NUT, BASE SCREW	2		
41	25	60484 1	FUEL FILTER	1		