



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	98423A13	WIRING HARNESS (ALPHA I)	1		
1	84	98423A15	WIRING HARNESS (BRAVO)	1		
2	32	77690	WRAPPING, PLASTIC (1/4")	2		
3		26079A 2	PLATE, WIRING HARNESS	1		
4	10	15001	SCREW, PLATE (3/4")	4		
5		98493A 2	BRACKET, MOUNTING	1		
6		15899A 2	IGNITION AMPLIFIER (W/84-1527)	1		
7		13406	BRACKET, IGNITION AMPLIFIER	1		
8	84	60871A15	WIRE ASSEMBLY	1		
9	10	28635	SCREW, IGNITION AMPLIFIER	3		
10	13	26392	LOCKWASHER	3		
11	12	20533	WASHER	3		
12		97257A 1	WATER TEMPERATURE SENDE	1		
12		49734A 1	WATER TEMPERATURE SENDE	OPT.		4
13	13	26396	LOCKWASHER, WATER TEMPE	1	SENDER TERMINAL (#10)	
14	11	68219	NUT, WATER TEMPERATURE	1	SENDER TERMINAL (#10)	
15		90806	OIL PRESSURE SENDER	1		
15		37293	OIL PRESSURE SENDER (DUAL)	OPT.		4
16	13	26396	LOCKWASHER, OIL PRESSURE	1	SENDER TERMINAL (#10)	
17	11	68219	NUT, OIL PRESSURE	1	SENDER TERMINAL (#10)	
18	22	46932	ELBOW, OIL PRESSURE SENDE	1		
19	22	42554	NIPPLE, OIL PRESSURE SENDE	1		
20		14464	BRACKET, MOUNTING	1		
21	10	34353	SCREW, MOUNTING BRACKET	1		
22	13	35048	LOCKWASHER, BRACKET SCREW	1		
23	54	78945	CLAMP, BRACKET SCREW	1		
24	16	24585 1	STUD, MOUNTING BRACKET	1		
25	23	15895	SPACER, MOUNTING BRACKET	1		
26	13	35048	LOCKWASHER, MOUNTING BRA	1		
27	11	24883	NUT, MOUNTING BRACKET STU	1		
28	88	11178	CIRCUIT BREAKER (50 AMP)	1		
29	13	26396	LOCKWASHER, CIRCUIT BREAK	2		
30	11	68219	NUT, CIRCUIT BREAKER TERMIN	2		
31	10	45862	SCREW, CIRCUIT BREAKER (7/8	2		
32	10	71405	SCREW, INSULATOR (3/8")	1		
33	12	56681	WASHER, CIRCUIT BREAKER SC	2		
34	11	46438	NUT, INSULATOR SCREW	4		
35	89	96819T	INSULATOR, CIRCUIT BREAKER	1		
36	89	96054	STARTER SOLENOID	1		
37	10	47910	SCREW, STARTER SOLENOID (5	2		
38	11	26392	NUT, STARTER SOLENOID SCRE	2		