



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		47754A	TRANSMISSION ASSEMBLY	1		
2	22	47629	ELBOW, TRANSMISSIO TO OIL H	1		
3	23	36159	BUSHING, RUDUCING - TRANSM	1		
4	22	47631	ELBOW, TRANSMISSION TO OIL	1		
5		47339A	ENGINE COUPLING ASSEMBLY,	1		
6	19	47463	PLUG, EXPANSION - ENGINE COI	1		
7	53	47469	RING, SNAP - BALL BEARING TO	1		
8	23	47471	BEARING, ENGINE COUPLING	1		
9	24	47755	SPRING, GUIDE - ENGINE COUPL	1		
10	30	47470	BALL BEARING, ENGINE COUPLI	1		
11		47333A	HOUSING ASSEMBLY, BEARING	1		
12	25	47756	"O" RING, BEARING SUPPORT H	1		
13	26	47465	OIL SEAL, BEARING SUPPORT H	1		
14	31	47468	ROLLER BEARING, BEARING SU	1		
15	27	47903	GASKET, BEARING SUPPORT HC	1		
16	10	47462	SCREW, BEARING SUPPORT HO	8		
17	13	32993	LOCKWASHER, BEARING SUPPC	8		
18		48461	ADAPTOR, OIL LEVEL GAUGE TL	1		
19	25	48462	"O" RING, OIL LEVEL TUBE ADAF	1		
20		48463	TUBE, OIL LEVEL GAUGE	1		
21		48464	GAUGE, OIL LEVEL	1		
22	25	35276	"O" RING, OIL LEVEL GAUGE	1		
23		48466	BRACKET, MOUNTING - OIL LEV	1		
24	10	34290	SCREW, MONTING BRACKET TO	2		
25	13	26992	LOCKWASHER, MOUNTING BRA	2		
26	54	48465	CLAMP, OIL LEVEL GAUGE TUBE	1		
27	10	20776	SCREW, OIL LEVEL GAUGE TUBI	1		
28	13	26992	LOCKWASHER, OIL LEVEL GAU	1		
29	11	21825	NUT, OIL LEVEL GAUGE TUBE CI	1		
30		47340A	BRACKET ASSEMBLY, TRAMISSI	1		
31		35852	MOUNT, TRANSMISSION MOUN	1		
32	10	47462	SCREW, MOUNT BRACKET TO T	2		
33	13	32993	LOCKWASHER, MOUNT BRACKE	2		
34	32	47516	HOSE, TRANSMISSION TO OIL C	1		
35	22	47630	ELBOW, TRANSMISSION HOSE	1		
36		47472	LEVER, SHIFT - TRANSMISSION	1		
37	12	20722	WASHER, SHIFT LEVER TO TRA	1		
38	13	26993	LOCKWASHER, SHIFT LEVER TC	1		
39	11	20083	NUT, SHIFT LEVER TO TRANSMI	1		
40	10	60179	SCREW, TRANSMISSION TO ENC	6		
41	12	22992	LOCKWASHER, TRANSMISSION	6		