



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		47501	BRACKET, MOUNTING (REAR) U:	2		
1		62255	BRACKET, MOUNTING (REAR) T	2		
2	10	37269	SCREW, MOUNTING BRACKET T	4		
3	13	32993	LOCKWASHER, MONTING BRACI	4		
1		58769	BRACKET, MOUNTING (REAR)	2	"V" DRIVE ONLY	
2	10	47462	SCREW, MOUNTING BRACKET T	6	"V" DRIVE ONLY	
3	13	32993	LOCKWASHER, MOUNTING BRA	6	"V" DRIVE ONLY	
4		47499	BRACKET, MOUNTING (FRONT) I	2		
4		48709	BRACKET, MOUNTING (FRONT) I	2		
5	10	48424	SCREW, MOUNTING BRACKET T	6		
6	13	35048	LOCKWASHER, MOUNTING BR	6		
7	10	47654	SCREW, CLAMP - ADJUSTING TF	4		
8	13	32993	LOCKWASHER, CLAMP ADJUSTI	4		
9	54	47528	CLAMP, ADJUSTING TRUNNION	8		
10	11	29553	NUT, CLAMP ADJUSTING TRUNP	4		
11	14	48467	TAB WASHER, ADJUSTING TRUI	4		
12		47601A	BRACKET ASSEMBLY, MOUNTIN	4	SERIAL 00000000-02508318	
13	12	48611	WASHER, MOUNTING BRACKE	8	SERIAL 00000000-02508318	
14		47656	MOUNT, MOUNTING BRACKET	8	SERIAL 00000000-02508318	
15	10	47652	SCREW, ADJUSTING TRUNNION	4	SERIAL 00000000-02508318	
12		52139A	BRACKET ASSEMBLY, MOUNTIN	4	SERIAL 02508319-09999999	
13	12	48611	WASHER, MOUNTING BRACKE	8	SERIAL 02508319-09999999	
14		47656	MOUNT, MOUNTING BRACKET	8	SERIAL 02508319-09999999	
15	10	52156	SCREW, ADJUSTING TRUNNION	4	SERIAL 02508319-09999999	
16		47518	TRUNNION, ADJUSTING - MOUN	4		
17	11	47525	NUT, JAM - ADJUSTING TRUNNI	4		
18	17	22116	PIN, ROLL - JAM NUT	4		
19		47986	BRACKET, MOUNTING - ENGINE	4	SERIAL 02508319-03469127	
20	10	48254	SCREW, MOUNTING BRACKET A	8	SERIAL 02508319-03469127	
21	13	31848	LOCKWASHER, MOUNTING BRA	8	SERIAL 02508319-03469127	