



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		48709	BRACKET, MOUNTING (FRONT)	2		
2	10	37612	SCREW, MOUNTING BRACKET C	6		
3	13	35048	LOCKWASHER, MOUNTING BRA	6		
4	10	47654	SCREW, CLAMP - ADJUSTING TF	2		
5	13	32993	LOCKWASHER, CLAMP ADJUSTI	2		
6	54	47528	CLAMP, ADJUSTING TRUNNION	4		
6	54	47528	CLAMP, ADJUSTING TRUNNION	4		
7	11	29553	NUT, CLAMP ADJUSTING TRUNN	2		
8		47601A 2	BRACKET ASSEMBLY, MOUNTIN	2	SERIAL 00000000-02536059	
9		47656	MOUNT, MOUNTING BRACKET	4	SERIAL 00000000-02536059	
10	12	48611	WASHER, MOUNTING BRACKET	4	SERIAL 00000000-02536059	
11	10	47652	SCREW, ADJUSTING TRUNNION	2	SERIAL 00000000-02536059	
8		52139A 4	BRACKET ASSEMBLY, MOUNTIN	2	SERIAL 02536060-09999999	
9		52753	MOUNT, MOUNTING BRACKET	4	SERIAL 02536060-09999999	
10	12	48611	WASHER, MOUNTING BRACKET	4	SERIAL 02536060-09999999	
11	10	52156	SCREW, ADJUSTING TRUNNION	2	SERIAL 02536060-09999999	
12	14	48467	TAB WASHER, ADJUSTING TRUI	2		
13	11	47525	NUT, JAM - ADJUSTING TRUNNII	2		
14	17	22116	PIN, ROD - JAM NUT	2		
15		47518	TRUNNION, ADJUSTING - MOUN	2		
16		47986	BRACKET, MOUNTING - ENGINE	2		
17	10	48254	SCREW, MOUNTING BRACKET A	4		
18	13	31848	LOCKWASHER, MOUNTING BRA	4		