



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	322	2986A 8	SWITCH BOX ASSEMBLY	1		
2	12	45075	WASHER, SWITCH BOX TERMIN	7		
3	13	26996	LOCKWASHER, SWITCH BOX TE	7		
4	11	45076	NUT, SWITCH BOX TERMINAL	7		
5	10	26184	SCREW, SWITCH BOX TO ELECT	4		
6	13	21547	LOCKWASHER, SWITCH BOX SC	4		
7	10	45218	SCREW, GROUND WIRE TO SWI	1		
8	332	2983A 6	IGNITION COIL ASSEMBLY	1		
9	104	5102	SCREW, IGNITION COIL CLAMP	1		
9	10	45103	SCREW, IGNITION COIL CLAMI	1		
10	12	37407	WASHER, IGNITION COIL SCR	1		
11	54	22740	CLIP, IGNITION COIL LEAD	1		
12		22789	"D" WASHER, IGNITION COIL E	1		
13	11	20645	NUT, IGNITION COIL SCREW	2		
14	10	26889	SCREW, IGNITION COIL TO ELEC	2		
15	13	26992	LOCKWASHER, IGNITION COIL S	2		
16		37707	VOLTAGE REGULATOR SERIAL	1	SERIAL 00000000-02761141	
17	10	52102	SCREW, REGULATOR TO PANEL	3	SERIAL 00000000-02761141	
18	13	26992	LOCKWASHER, REGULATOR SC	3	SERIAL 00000000-02761141	
19		53009A 1	MOUNT ASSEMBLY, REGULATOI	1	SERIAL 00000000-02761141	
20	10	48004	SCREW, MOUNT TO PANEL (5/	3	SERIAL 00000000-02761141	
21	10	22421	SCREW, REGULATOR TO MOU	3	SERIAL 00000000-02761141	
22	23	27958	SPACER, REGULATOR SCREW	3	SERIAL 00000000-02761141	
23	11	20664	NUT, REGULATOR SCREW LA	3	SERIAL 00000000-02761141	
24		25661	STARTER SOLEMOID	1		
25	13	26993	LOCKWASHER, STARTER SOLEI	2		
26	10	20083	NUT, STARTER SOLENOID TERM	2		
27	13	26996	LOCKWASHER, STARTER SOLEI	2		
28	11	20645	NUT, STARTER SOLENOID TERM	2		
29	10	26774	SCREW, STARTER SOLEOID TO	2		
30	13	26992	LOCKWASHER, STARTER SOLEI	2		