


INBOARD

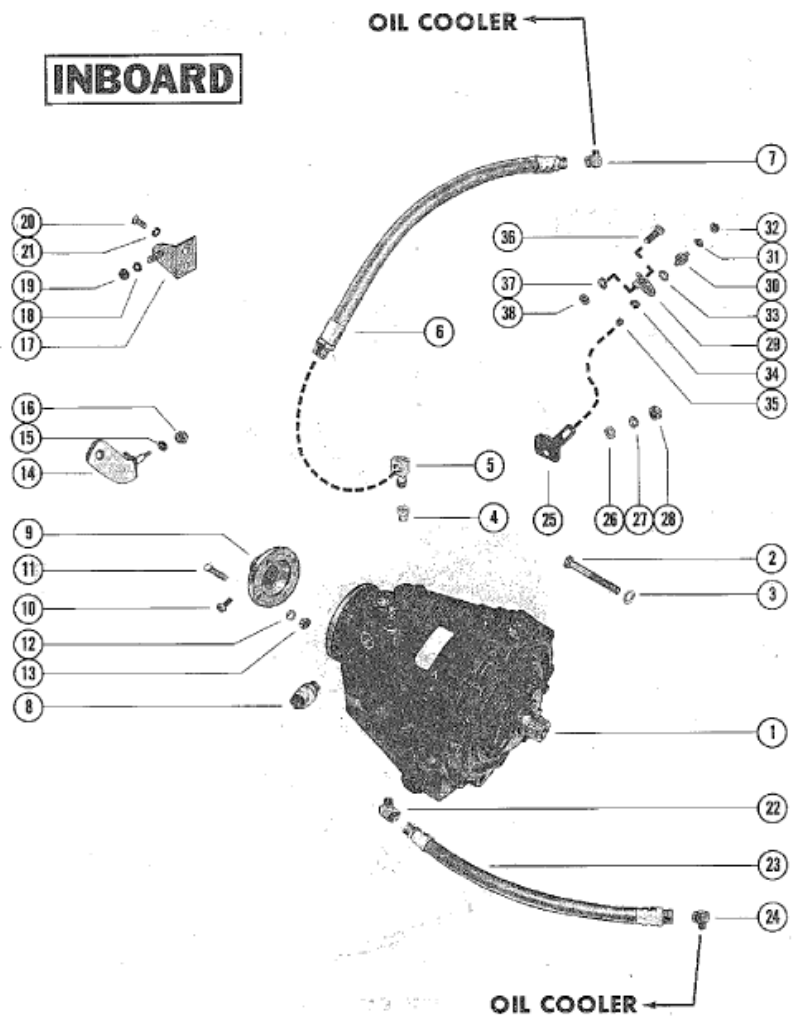

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		47810	TRANSMISSION (DIRECT DRIVE)	1	72 SERIES	
1		47811	TRANSMISSION (1.523:1 REDUC	1	72 SERIES	
1		47812	TRANSMISSION (1.909:1 REDUC	1	72 SERIES	
1		47813	TRANSMISSION (2.57:1 REDUCT	1	72 SERIES	
1		47814	TRANSMISSION (2.909:1 REDUC	1	72 SERIES	
2	10	60179	SCREW, TRANSMISSION TO ENI	6		
3	13	32993	LOCKWASHER, TRANSMISSION	6		
4	23	36159	BUSHING, REDUCING - TRANSM	1	SERIAL 00000000-03469127	
5	22	47631	ELBOW, HOSE TO TRANSMISSIC	1	SERIAL 00000000-03469127	
6	32	47516 2	HOSE, TRANSMISSION TO OIL C	1	SERIAL 00000000-03469127	
7	22	47630	ELBOW, HOSE TO OIL COOLER	1	SERIAL 00000000-03469127	
5	22	63824	ELBOW, HOSE TO TRANSMISSIC	1	SERIAL 03469128-09999999	
6	32	47516 6	HOSE, TRANSMISSION TO OIL C	1	SERIAL 03469128-09999999	
7	22	47629	ELBOW, HOSE TO OIL COOLER	1	SERIAL 03469128-09999999	
8		47613	SWITCH, NEUTRAL SAFETY	1		
9		48386A 1	FLANGE ASSEMBLY (1")	OPT.		
9		48387A 1	FLANGE ASSEMBLY (1 1/8")	OPT.		
9		48388A 1	FLANGE ASSEMBLY (1 1/4")	OPT.		
9		48389A 1	FLANGE ASSEMBLY (1 3/8")	OPT.		
9		48390A 1	FLANGE ASSEMBLY (1 1/2")	OPT.		
9		57295A 1	FLANGE ASSEMBLY (1 3/4")	OPT.		
9		57296A 1	FLANGE ASSEMBLY (2")	OPT.		
10	10	60171	SCREW, FLANGE TO PROPELLEI	2	SEE NOTE BELOW	
10	10	60170	SCREW, FLANGE TO PROPELLEI	2	SEE NOTE BELOW	
10	10	60169	SCREW, FLANGE TO PROPELLEI	2	SEE NOTE BELOW	
11	10	60106	SCREW, TRANSMISSION FLANG	4		
12	13	32993	LOCKWASHER, FLANGE SCREW	4		
13	11	22024	NUT, FLANGE SCREW	4		
14		48649	BRACKET, SHIFT CABLE	1	SERIAL 00000000-03469127	
15	12	37407	WASHER, SHIFT CABLE TO BRAI	1	SERIAL 00000000-03469127	
16	11	46438	NUT, SHIFT CABLE TO BRACKET	1	SERIAL 00000000-03469127	
17		63815A 2	BRACKET ASSEMBLY, SHIFT CAL	1	SERIAL 03469128-09999999	
18	12	56681	WASHER, SHIFT CABLE STUD	1	SERIAL 03469128-09999999	
19	11	46438	NUT, SHIFT CABLE STUD	1	SERIAL 03469128-09999999	
20	10	35585	SCREW, BRACKET TO FLYWHEE	2	SERIAL 03469128-09999999	
21	13	26992	LOCKWASHER, BRACKET SCREW	2	SERIAL 03469128-09999999	
22	22	47629	ELBOW, HOSE TO TRANSMISSIC	1	SERIAL 00000000-03469127	
23	32	47516 3	HOSE, OIL COOLER TO TRANSM	1	SERIAL 00000000-03469127	
24	22	47603	ELBOW, HOSE TO OIL COOLER	1	SERIAL 00000000-03469127	
22	22	63835	ELBOW, HOSE TO TRANSMISSIC	1	SERIAL 03469128-09999999	
22	22	47516 2	HOSE, OIL COOLER TO TRANSM	1	SERIAL 03469128-09999999	