



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		76925A 3	TRANSMISSION ASSEMBLY, COM	1		
-		76925A 6	TRANSMISSION ASSEMBLY, COM	1		
1		76925A 4	HOUSING ASSEMBLY, TRANSM	1		
2			PIN, SPRING - TRANSMISSIO	1		1
2A	22	47902	VENT, TRANSMISSION HOU	1		
3		64090A 1	TUBE ASSEMBLY, DIPSTICK	1		
4		63037	DIPSTICK	1		
5			BALL, TRANSMISSION HOU	1		1
6	22	36373	PLUG, PIPE - TRANSMISSIO	1		
7	10	34354	SCREW, TRANSMISSION HOU	4	NOT INCLUDED WITH TRANSM	
7	10	32132	SCREW, TRANSMISSION HOU	2	NOT INCLUDED WITH TRANSM	
7	10	35787	SCREW, TRANSMISSION HOU	1	NOT INCLUDED WITH TRANSM	
8	13	35048	LOCKWASHER, TRANSMISSIO	7		
9			"O" RING, PUMP TO TRANSMI	2		2
10			"O" RING, PUMP TO TRANSMI	1		2
11			"O" RING, PUMP TO TRANSMI	1		2
12		87813A 1	PUMP ASSEMBLY	1		
13			SEAL, PUMP COVER	1		2
14	22	20025	PLUG, PUMP	2		
15		62722	PISTON, RELIEF VALVE	1		
16	24	62790	SPRING, RELIVE VALVE PISTO	1		
17			"O" RING, PUMP PLUG (3/4" O.	2		2
18	19	62753	PLUG, PUMP	2		
19	10	35386	SCREW, PUMP TO TRANSMISS	5		
19	10	31984	SCREW, PUMP TO TRANSMISS	2		
20	12	45728	WASHER, SEALING - PUMP SC	7		
21	25	62700	"O" RING, PUMP (3 7/16" O.D.)	1		
22		87814A 2	PUMP ASSEMBLY, GEROTOR (	1		
23	10	60300	SCREW, PUMP ATTACHING (3/	7		
24	13	26992	LOCKWASHER, PUMP SCREW	7		
25		63127A 1	FLANGE ASSEMBLY, OIL COOL	1		
26	10	66137	SCREW, FLANGE TO TRANSMI	1		
27	13	26992	LOCKWASHER, FLANGE SCREW	1		
28			"O" RING, FLANGE TO TRANSM	1		2
29		66515A 2	COVER ASSEMBLY, OIL COOLE	1		
30	27	62724	GASKET, OIL COOLER COVER	1		
31	22	36373	PLUG, PIPE - COVER	1		
32	11	21612	NUT, JAM - OIL COOLER	2		
33			"O" RING, OIL COOLER JAM	2		2
34	10	60300	SCREW, COVER TO TRANSMIS	4		
35	12	26992	LOCKWASHER, COVER SCREW	4		