



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		54785	ADAPTOR AND VALVE ASSEMBL	1		
2	25	33756	RING, SEALING - ADAPTOR AND	1		
2A	26	73522	SEAL, ADAPTOR	1		
3	10	54786	SCREW, ADAPTOR TO ENGINE	2		
4		76792	ADAPTOR	1		
4A	10	47409	SCREW, ADAPTOR ATTACHING	1		
4B	12	47523	WASHER, ADAPTOR SCREW	1		
5		73867	BRACKET, MOUNTING - OIL FILT	1	SERIAL 00000000-04890179	
5		78610A	ADAPTOR ASSEMBLY, OIL FILTE	1	SERIAL 04890180-09999999	
6	10	48424	SCREW, MOUNTING ENGINE TO	2		
7	13	35048	LOCKWASHER, MOUNTING ENG	2		
8		48504A	ADAPTOR, OIL FILTER	1	SERIAL 00000000-04890179	
9	22	36373	PLUG, PIPE - OIL FILTER ADAPT	1		
10	22	32802	PLUG, PIPE - OIL FILTER ADAPT	1	SERIAL 00000000-04890179	
11	10	20359	SCREW, OIL FILTER ADAPTOR A	2	SERIAL 00000000-04890179	
12	13	37459	LOCKWASHER, OIL FILTER ADAF	2	SERIAL 00000000-04890179	
13	12	20086	WASHER, OIL FILTER ADAPTOR	2		
14		32720	FITTING, OIL FILTER TO ADAPTC	1		
15		52731	OIL FILTER	1		
16	32	48946	HOSE, OIL FILTER ADAPTOR TO	1	SERIAL 00000000-04890179	
16A	22	71923	ELBOW, HOSE TO ADAPTOR (45	1	SERIAL 00000000-04890179	
16	32	48944	HOSE, ADAPTOR TO ENGINE (1	1	SERIAL 04890180-09999999	
17	22	48246	ELBOW, HOSE TO ENGINE (90)	1		
18	32	48944	HOSE, OIL COOLER TO ENGINE	1		
19	22	63825	ELBOW, HOSE TO OIL COOLER	1		
21		63831	OIL COOLER (5")	1		
22		63820	BRACKET, OIL COOLER CLAMPIN	1		
23		56328	BRACKET, OIL COOLER CLAMPIN	1		
24	10	69028	SCREW, CLAMPING BRACKET (3	2		
25	11	30506	NUT, CLAMPING BRACKET SCRE	2		
26	10	47277	SCREW, OIL COOLER BRACKET	1		
27	12	26825	WASHER, OIL COOLER BRACKET	1		
28	32	48944	HOSE, ADAPTOR TO OIL COOLE	1	SERIAL 00000000-04890179	
28	32	48944	HOSE, ADAPTOR TO OIL COOLE	1	SERIAL 04890180-09999999	
29	22	63825	ELBOW, HOSE TO OIL COOLER	1		
30	32	63829	HOSE, MOLDED - OIL COOLER TI	1		
31	54	64489	CLAMP, MOLDED HOSE TO FLYV	1		
32	54	47715	CLAMP, MOLDED HOSE TO FLYV	1		
33	54	32780	CLAMP, MOLDED HOSE ATTACH	2		
34		63832	OIL COOLER (9")	1		
34		63832	OIL COOLER (12") V-DRIVE OIL	1		