



20192

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	46	72774A50	PUMP ASSEMBLY, Seawater	1		
2	46	72774A40	BODY, WATER PUMP	1		
3		87631A 1	COVER, WATER PUMP	1		
4	10	73275	SCREW, (.312-18 x 2.88), WATE	5		
5	12	20084	WASHER, (.328 x .562 x .062), C	5		
6	27	94915	GASKET, COVER TO OUTER w	1		
7		94916	WEAR PLATE, OUTER	1		
8	27	94914	GASKET, BODY TO WEAR PLA	2		
9	19	59504	PLUG, IMPELLER	1		
10	47	59362	IMPELLER	1		
11	28	56662	KEY, IMPELLER DRIVE	1		
12		94576	WEAR PLATE, INNER	1		
13	25	94288	QUAD RING, PUMP HOUSING	1		
14	46	94913A 2	PUMP HOUSING ASSEMBLY	1		
15	26	90562	SEAL, (1.254 Outside Diameter	2		
16	30	72961	BEARING, Ball, WATER PUMF	2		
17		59501A 1	SHAFT, WATER PUMP	1		
18	53	23720	RING, Retaining, BALL BEARIN	1		
19	26	72785	SEAL, WATER PUMP SHAFT	1		
20		47530	HUB, WATER PUMP PULLEY	1		
21		52822T	PULLEY, WATER PUMP (CAST)	1		
22	10	47277	SCREW, (.312-24 x .750), PULLEY	4		
23	13	39107	LOCKWASHER, (.312), PULLEY S	4		
24	22	32802	PLUG, Pipe (.125-27) (FOR WATE	1		
25	57	13457T	BELT, WATER PUMP (30")	1		
26		15295T	BRACKET, WATER PUMP	1	(Stamped Steel)	
27	10	47461	SCREW, (.437-14 x 1.00), WATER	1		
28	10	48948	SCREW, (.437-14 X .88), WATER	1		
29	13	32993	LOCKWASHER, (.437), BRACKET	2		
30	12	27025	WASHER, BRACKET SCREW	1		
31	10	99347	SCREW, (.312-18 x 3.75)	3		
32	13	39107	LOCKWASHER, (.312)	3		
33	11	21908	NUT, (.312-18)	3		
34		15751T	BRACE, WATER PUMP	1		
35	10	47461	SCREW, (.437-14 x 1.00), BRACE	1		
36	13	32993	LOCKWASHER, (.437), BRACE SC	1		
37	12	30315	WASHER, BRACE SCREW	1		
38	10	35786	SCREW, (.375-24 x 1.00), WATER	1		
39	13	35048	LOCKWASHER, (.375), BRACE SC	1		
40	11	24883	NUT, BRACE SCREW	1		