



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		59974	INTAKE MANIFOLD	1		
2	22	66201	CONNECTOR, INTAKE MANIFOLD	1		
3	32	66206	HOSE, BY-PASS - INTAKE MANIFOLD	1		
4	54	38426	CLAMP, BY-PASS HOSE ATTACH	2		
5	10	37510	BOLT, INTAKE MANIFOLD TO CYLINDER	16		
6	22	48336	PLUG, PIPE - INTAKE MANIFOLD	1		
7	54	47513	EYE, LIFTING - REAR	1		
7	54	94015	EYE, LIFTING - FRONT (STERN DRIVE)	1		
7	54	64628	EYE, LIFTING - FRONT (INBOARD)	1		
8	10	34354	SCREW, LIFTING EYE ATTACHING	2	2 USED ON STERN DRIVE; 4 USED ON INBOARD	
9	13	35048	LOCKWASHER, LIFTING EYE SCREW	2	2 USED ON STERN DRIVE; 4 USED ON INBOARD	
10	27	65184	GASKET SET, INTAKE MANIFOLD	1		4
11		67859	WATER PUMP ASSEMBLY	1		
12	27	49110	GASKET, WATER PUMP MOUNTING	2		3
13	22	66201	CONNECTOR, WATER PUMP - B'Y-PASS	1		
14	22	48336	PLUG, PIPE - WATER PUMP (INBOARD)	1		
14	22	75983	PLUG, PIPE - WATER PUMP (STERN DRIVE)	1		
15	10	32132	SCREW, WATER PUMP TO CYLINDER	4		
16		59775	PULLEY, WATER PUMP (3 GROOVES)	AR		
16		52349	PULLEY, WATER PUMP (1 GROOVE)	AR		
17	10	47277	SCREW, PULLEY TO WATER PUMP	4		
18	13	39107	LOCKWASHER, WATER PUMP PULLEY	4		
19		75586	DAMPER, TORSIONAL - CRANKSHAFT	1		
20		77244	PULLEY, TORSIONAL DAMPER (CRANKSHAFT)	1		
20		52181	PULLEY, TORSIONAL DAMPER (WATER PUMP)	1		
21	10	49101	BOLT, PULLEY AND TORSIONAL DAMPER	1		
22	13	49102	LOCKWASHER, PULLEY AND TORSIONAL DAMPER	1		
23	12	49103	WASHER, PULLEY AND TORSIONAL DAMPER	1		
24	10	34353	BOLT, PULLEY TO DAMPER (1")	3		
24	10	76926	BOLT, PULLEY TO DAMPER (7/8")	3		
24	10	27165	BOLT, PULLEY TO DAMPER (INBOARD)	3		
25	13	35048	LOCKWASHER, PULLEY BOLT	1		
26	57	78200	BELT, ALTERNATOR DRIVE (47")	1		
27		66215	COVER ASSEMBLY, CRANKCASE	1		
28	26	49154	OIL SEAL, CRANKCASE FRONT	1		
29		59966	POINTER, TIMING (L.H. ROTATING)	1		
29		59981	POINTER, TIMING (R.H. ROTATING)	1		
30	27	54529	GASKET, CRANKCASE FRONT END	1		3
31	10	34277	SCREW, CRANKCASE FRONT END	10		
32	842	6522	CYLINDER BLOCK ASSEMBLY	1		
33		63228	ADAPTOR, OIL FILTER STERN DRIVE	1		