



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		91823A 3	DISTRIBUTOR ASSEMBLY, COM	1		
2	391	5075	CAP, DISTRIBUTOR	1		
3	391	5076	GASKET, DISTRIBUTOR CAP	1		
4	391	7057	ROTOR	1		
5	391	5092	CONDENSER	1		
6	391	5093	BRACKET, CONDENSER ATTACH	1		
7	391	5091	SCREW, BREAKER ATTACHING	1		
8	391	5090	BREAKER ASSEMBLY	1		
9	391	5089	SCREW, BREAKER ATTACHING	1		
10	84	65773A 6	LEAD ASSEMBLY, PRIMARY TE	1		
11	391	5085	CLAMP, DISTRIBUTOR CAP AT	2		
12	391	5084	PIN, CLAMP TO DISTRIBUTOR	2		
13	391	5087	SCREW, DISTRIBUTOR CAP AT	2		
14	391	5086	WASHER, DISTRIBUTOR CAP S	2		
15	391	5083	VENT, SCREEN	2		
16	391	5080	OILER	1		
17	391	6390	GEAR, DRIVE	1		
18	391	6391	PIN, DRIVE GEAR	1		
19	27	52184	GASKET, DISTRIBUTOR	1		4
20		52185	CLAMP, DISTRIBUTOR TO INTAK	1		
21	10	54528	SCREW, DISTRIBUTOR CLAMP A	1		
22	84	92151A32	LEAD ASSEMBLY, DISTRIBUTOR	1		
23		32193	COIL, IGNITION	1		
24		77294	BRACKET, IGNITION COIL MOUN	1		
25	10	66652	SCREW, BRACKET TO IGNITION	1		
26	12	30164	WASHER, IGNITION COIL TERMI	2		
27	13	26996	LOCKWASHER, IGNITION COIL T	2		
28	11	68219	NUT, IGNITION COIL TERMINAL	2		
29	10	25299	SCREW, IGNITION COIL ATTACH	2		
30	12	20084	WASHER, IGNITION COIL ATTAC	2		
31	13	26993	LOCKWASHER, IGNITION COIL A	2		
32	84	92151A36	LEAD ASSEMBLY, HIGH TENSION	8		
33	33	59571	SPARK PLUG (AC#MR43T)	8		
34		54676	RETAINER, HIGH TENSION LEAC	2		
34		32783	RETAINER, HIGH TENSION LEAC	2		
34		32784	RETAINER, HIGH TENSION LEAC	2		
35		63192	RETAINER, HIGH TENSION LEAC	4		
36	10	37612	SCREW, RETAINER ATTACHING	2		
37	12	25909	WASHER, RETAINER SCREW	2		