



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		47493A12	DISTRIBUTOR ASSEMBLY	1		
2	393	4988	CAP, DISTRIBUTOR	1		
3		65864	ROTOR, DISTRIBUTOR	1		
4		59754A 1	HOUSING ASSEMBLY, ADAPTC	1		
5	35	60047A 1	FLAME ARRESTOR ASSEMBL	2		
6	17	20032	PIN, DOWEL - ADAPTOR HOL	2		
7	54	65783A 2	CLAMP ASSEMBLY, CAP TO AD	2		
8	10	21335	SCREW, CLAMP TO ADAPTOI	2		
9	13	26996	LOCKWASHER, DISTRIBUTOR	2		
10	393	2918A 8	TRIGGER ASSEMBLY	1		
11	10	47618	SCREW, TRIGGER ATTACHING	4		
12	13	26996	LOCKWASHER, TRIGGER ATT	4		
13	10	26595	SCREW, ADAPTOR HOUSING F	4		
14	13	26995	LOCKWASHER, ADAPTOR HOL	4		
15		52618	WIRE, GROUND	1		
16	43	47619	GEAR, DISTRIBUTOR	1		
17	17	47617	ROLL PIN, GEAR TO DISTRIBU	1		
18	27	52184	GASKET, DISTRIBUTOR	1		4
19		52185	CLAMP, DISTRIBUTOR TO INTAK	1		
20	10	54528	SCREW, DISTRIBUTOR CLAMP A	1		
21		47862A 2	LEAD ASSEMBLY, DISTRIBUTOR	1		
22	332	2854	BOOT, COIL TOWER	1		
22A	25	47623	GROMMET, COIL LEAD WIRE	1		
23		32782	RETAINER, HIGH TENSION LEAC	2		
23		32783	RETAINER, HIGH TENSION LEAC	2		
23		32784	RETAINER, HIGH TENSION LEAC	2		
24	84	92151A36	LEAD ASSEMBLY, HIGH TENSIO	8		
25	85	71006A 1	PROTECTOR, SPARK PLUG	8		
26	33	59660	SPARK PLUG (AC-MR 41T)	8		
27		47763	BRACKET, RETAINER - HIGH TE	2		
28	25	38930	GROMMET, RETAINER BRACKET	2		
29	10	27165	SCREW, RETAINER BRACKET TI	1		
30	13	35048	LOCKWASHER, RETAINER BRAC	1		
29	10	48948	SCREW, RETAINER BRACKET TI	1		
30	13	32993	LOCKWASHER, RETAINER BRAC	1		