



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	50	77328A 1	STARTER MOTOR ASSEMBLY, C	1,...		
-	50	76965A 1	STARTER MOTOR ASSEMBLY, C	,1,...		
-	50	79604A 1	STARTER MOTOR ASSEMBLY, C	,,1,...		
-	50	79822A 1	STARTER MOTOR ASSEMBLY, C	,,,1,...		
-	50	79823A 1	STARTER MOTOR ASSEMBLY, C	,,,,1		
1		75666	HOUSING, DRIVE END	1,...		
1		79206	HOUSING, DRIVE END	,,1,...		
1		71696	HOUSING, DRIVE END	,,,1,...		
2	23	33369	BUSHING, DRIVE END HOUS	1,1,1,1,		
3		33292	COLLAR, THRUST - DRIVE ENC	1,1,1,1,		
4	53	33290	RING, RETAINING - PINION STR	1,1,1,1,		
5		33291	COLLAR, PINION STOP - DRIVE	1,1,1,1,		
6		33318	DRIVE ASSEMBLY, CLUTCH - A	1,...		
6		68606	DRIVE ASSEMBLY, CLUTCH - A	,1,...		
6		68609	DRIVE ASSEMBLY, CLUTCH - A	,,1,...		
6		79205	DRIVE ASSEMBLY, CLUTCH - A	,,,,1		
7	23	33369	BUSHING, GEAR END - CLUT	1,1,1,1,		
8	24	33368	SPRING, CLUTCH DRIVE	1,1,1,1,		
9		N.S.S.	COLLAR, CLUTCH DRIVE (DE	1,1,1,1,		
10		33367	LOCKWIRE, COLLAR AND SP	1,1,1,1,		
11		79396	PLATE, BEARING	1,1,1,...		
11		68620	PLATE, BEARING	,,,1,1		
12	23	71694	BUSHING, BEARING PLATE	1,1,1,1,		
13	12	68614	WASHER, BEARING PLATE	1,1,1,1,		
14	10	75659	SCREW, BEARING PLATE ATT	2,2,2,...		
14	10	79209	SCREW, BEARING PLATE ATT	,,,2,2		
15	13	26996	LOCKWASHER, BEARING PLAT	2,2,2,2,		
16		75665	ARMATURE	1,.,1,		
16		68606	ARMATURE	,1,...		
16		68607	ARMATURE	,,1,...		
16		71693	ARMATURE	,,,,1		
17		48263	SHOE, POLE - FIELD COIL	4,4,4,4,		
17		N.S.S.	SHOE, POLE - FIELD COIL (DEL	,,,,4		
18	10	60684	SCREW, POLE SHOE TO FIELD	4,4,4,4,		
19		33293	INSULATION, FIELD COIL	4,4,4,4,		
20	25	68619	GROMMET, FIELD COIL - FIELD	1,1,1,...		
20	25	79208	GROMMET, FIELD COIL - FIELD	,,,1,1		
21		75664	FIELD COIL ASSEMBLY	1,.,1,1,		
21		48272	FIELD COIL ASSEMBLY	,1,...		
21		79212	FIELD COIL ASSEMBLY	,,,1		
22	12	22258	WASHER LEATHER, COMMUN	1,1,1,1		