



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	332	2983A17	IGNITION COIL ASSEMBLY	1			
2	10	45102	SCREW, IGNITION COIL CLAMPIN	1			
2	10	45103	SCREW, IGNITION COIL CLAMPIN	1			
3	12	37407	WASHER, IGNITION COIL SCREW	1			
4	54	22740	CLIP, IGNITION COIL LEAD	1			
5		22789	"D" WASHER, IGNITION COIL SC	1			
6	11	20645	NUT, IGNITION COIL SCREW	2			
7	10	27337	SCREW, IGNITION COIL TO ELEC	2			
8	13	26992	IGNITION COIL SCREW	2			
9	88	65093	CIRCUIT BREAKER,	1			
11	10	47618	SCREW, CIRCUIT BREAKER TO E	2			
12	25	61999	GROMMET, CIRCUIT BREAKER SC	4			
13	23	61998	SPACER, CIRCUIT BREAKER SCF	2			
14	12	47960	WASHER, CIRCUIT BREAKER SC	4			
15	11	46438	NUT, CIRCUIT BREAKER SCREW	2			
16		65940	BRACKET, CIRCUIT BREAKER	1			
17	10	53787	SCREW, BRACKET TO ELECTRIC	2			
18	13	26996	LOCKWASHER, BRACKET SCREW	2			
19		25661	STARTER SOLENOID	1			
20	13	26993	LOCKWASHER, STARTER SOLEI	2			
21	11	20083	NUT, STARTER SOLENOID TERM	2			
22	13	26996	LOCKWASHER, STARTER SOLEI	2			
23	11	20645	NUT, STARTER SOLENOID TERM	2			
24	10	20031	SCREW, SOLENOID TO ELECTRI	2			
25	13	26992	LOCKWASHER, STARTER SOLEI	2			
26	84	64408	WIRING HARNESS	1			
27		26079	PLATE, WIRING HARNESS TO M	1			
28	10	46718	SCREW, WIRING HARNESS PLA	4			
29	332	2986A22	SWITCH BOX ASSEMBLY	1			
30	13	26996	LOCKWASHER, SWITCH BOX TE	7			
31	11	45076	NUT, SWITCH BOX TERMINAL	7			
32	10	45218	SCREW, GROUND WIRE TO SWI	1			
33		63878	COMPARTMENT, ELECTRICAL	1			
34	10	52498	SCREW, ELECTRICAL COMPART	2			
35	11	20696	NUT, ELECTRICAL COMPARTME	2			
36		63879	PLATE, SWITCH BOX	1			
37	25	57009	GROMMET, SWITCH BOX PLATE	1			
38	16	65941	STUD, SWITCH BOX AND COVER	4			
39	13	22773	LOCKWASHER, SWITCH BOX AN	4			
40		65939A	COVER ASSEMBLY, ELECTRICAL	1			
42	12	21249	WASHER, COVER STUD	8			