


Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		89876A	BASE ASSEMBLY	1		
2	22	816133	FITTING	1		
3	22	32561	PIPE PLUG	1		
4	35	807172	FUEL FILTER/WATER SEPARATI	1		
5	22	33821	FITTING	1		
6	22	808003	FITTING	1		
7	22	807958	FITTING	1		
8		807956T	INSULATOR-BACK	1		
9		807806T	INSULATOR-CAP	1		
10		807807T	INSULATOR-BASE	1		
11		807918T	BRACKET	1		
12	11	45592	NUT	2		
13	11	860069	NUT	2		
14	32	807953T	FUEL LINE-FUEL PUMP TO FILTE	1		
15	32	807954T	FUEL LINE-FUEL REGULATOR TI	1		

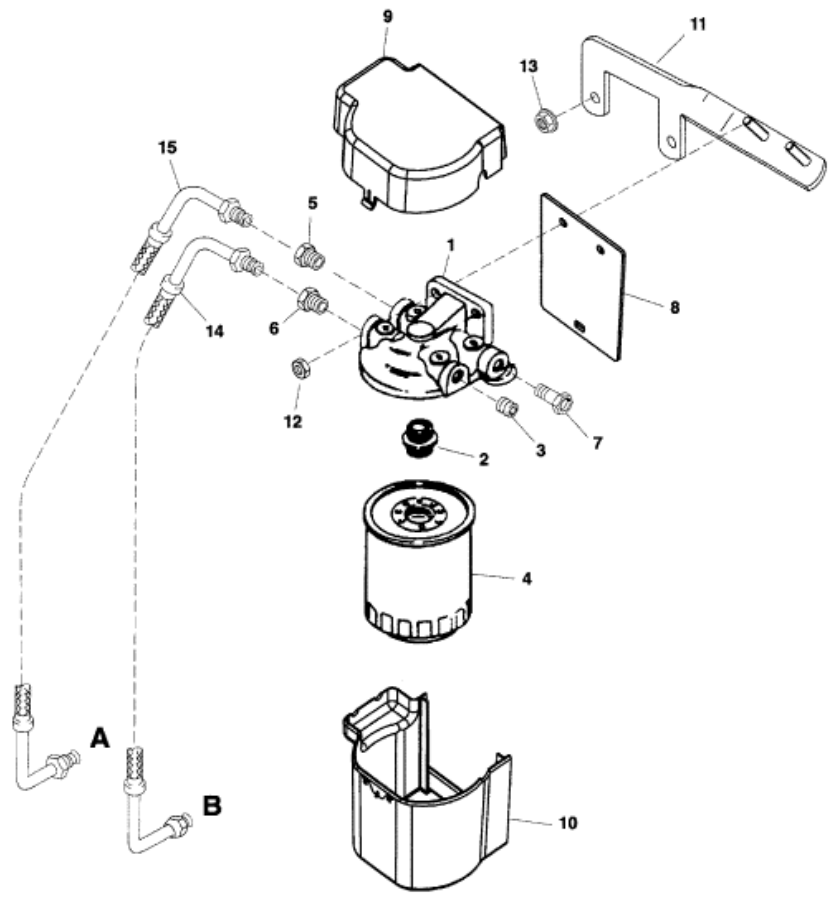

A = TO FUEL PRESSURE REGULATOR
 B = TO FUEL PUMP