



A - Audio Warning System

- 1 - Oil Pressure Switch
- 2 - Transmission Fluid Temperature Switch

B - Instrumentation System

- 1 - Oil Pressure Sender
- 2 - Water Temperature Sender

C - Charging And Starting System

- 1 - Alternator
- 2 - Ground Stud
- 3 - starter
- 4 - Circuit Breaker
- 5 - Starter Slave Solenoid
- 6 - Neutral Safety Switch

a - Harness Connector

b - Positive (+) Power Wire to EFI Harness

c - Auxiliary Tachometer Lead

**90 Amp
System
Fuse**



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	808035A 2	WIRING HARNESS-ENGINE	1		