



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	46	72774A86	PUMP ASSEMBLY-SEAWATER	1	(TWO PIECE BODY)	
1	46	807151A 9	PUMP ASSEMBLY-SEAWATER	1	(ONE PIECE BODY)	
2	46	72774A40	BODY	1	TWO PIECE BODY	
3		87631A 4	COVER	1	TWO PIECE BODY	
4	27	805215 1	GASKET	1	TWO PIECE BODY	
5	10	73275	SCREW (5/16-18 X 2-7/8 IN.)	2	TWO PIECE BODY	
6	10	99347	SCREW (5/16-18 X 3-3/4 IN.)	3	TWO PIECE BODY	
7	12	20084	WASHER	5	TWO PIECE BODY	
8		94916	PLATE-WEAR (OUTER)	1	TWO PIECE BODY	
8	27	94914	GASKET	2	TWO PIECE BODY	
9	46	807151A 7	BODY-WATER PUMP	1	ONE PIECE BODY	
10	25	807149	QUAD RING	1	ONE PIECE BODY	
11	10	807356	SCREW (5/16-18 X 2-5/8 IN.)	2	ONE PIECE BODY	
11	10	74191	SCREW (5/16-18 X 3-1/4 IN.)	3	ONE PIECE BODY	
12	12	814806	WASHER	5	ONE PIECE BODY	
13	47	59362 1	IMPELLER	1		
14		94576	PLATE-WEAR (INNER)	1		
15	25	94288	QUAD RING	1		
16	46	94913A 5	HOUSING ASSEMBLY-PUMP	1		
17	26	90562	SEAL-OIL	2		
18	30	72961	BEARING-BALL	2		
19		59501A 1	SHAFT	1		
20	53	23720	RING-RETAINER	1		
21	26	72785	SEAL-OIL	1		
22		807731T	PULLEY	1		
23	13	39107	LOCKWASHER (5/16 IN.)	3		
24	11	21908	NUT (5/16-18)	3		
25		807749T	BRACKET	1		
26	10	34353	SCREW (3/8-16 X 1 IN.)	2		
27	13	35048	LOCKWASHER (3/8 IN.)	2		
28	12	34714	WASHER	1		