



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		90747A 3	DISTRIBUTOR ASSEMBLY	1		
2		43557A 1	CAP, DISTRIBUTOR	1		
3	10	90926	SCREW, DISTRIBUTOR CAP	4		
4	27	98242	GASKET, DISTRIBUTOR CAP	1		
5		13524A 3	ROTOR	1		
6		42862	SENSOR WHEEL	1		
7	10	11252	SCRE, SENSOR WHEEL	3		
8	87	91019A 3	SENSOR ASSEMBLY	1		
9	10	47618	SCREW, SENSOR	2		
10	12	27736	WASHER, SENSOR SCREW	2		
11	43	47619 1	GEAR, DRIVE	1		
12	17	47617	PIN, DRIVE GEAR	1		
13	23	90915	BUSHING, DISTRIBUTOR	2		
14	27	34486 1	GASKET, DISTRIBUTOR	1		4
15		52185	CLAMP, DISTRIBUTOR TO INTAK	1		
16	10	35169	SCREW, DISTRIBUTOR CLAMP (	1		
17	12	30164	WASHER, DISTRIBUTOR TERMII	2		
18	13	26996	LOCKWASHER, DISTRIBUTOR T	2		
19	11	68219	NUT, DISTRIBUTOR TERMINAL (	2		
20	84	42841A10	LEAD ASSEMBLY, DISTRIBUTOR	1		
21	84	43376A 4	SPARK PLUG WIRE KIT	1		
22	85	63709A 1	BOOT, ASSEMBLY, SPARK PLU	8		
23	33	59571	SPARK PLUG (NGK-BR6FS)	8		
24		54676	RETAINER, HIGH TENSION LEAC	2		
25		32783	RETAINER, HIGH TENSION LEAC	2		
26		32784	RETAINER, HIGH TENSION LEAC	2		
27	392	7803A 4	COIL, IGNITION	1		
28		77294	BRACKET, IGNITION COIL	1		
29	10	41408	SCREW, BRACKET (1-1/2")	1		
30	12	30164	WASHER, IGNITION COIL TERMI	2		
31	13	26996	LOCKWASHER, IGNITION COIL T	2		
32	11	68219	NUT, IGNITION COIL TERMINAL	2		
33	10	59645	SCREW, IGNNITION COIL (3/4")	2		
34	13	26993	LOCKWASHER, IGNITION COIL S	2		
35	12	20084	WASHER, IGNITION COIL SCREW	2		