



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		805185A36	DISTRIBUTOR ASSEMBLY	1		
2		805759T 1	CAP-DISTRIBUTOR	1		
3	27	805760	GASKET	1		
4	10	90926	SCREW (#10-32 X 13/16 IN.)	4		
5		13524T 1	ROTOR/SENSOR WHEEL	1		
6	87	861780A 2	SENSOR ASSEMBLY	1		
7	10	66686	SCREW (#10-32 X 1 IN.)	2		
8	13	26996	WASHER	2		
9	43	818807	DRIVE GEAR	1		
10	17	47617	PIN	1		
11	23	90915	BUSHING	2		
12	12	90931	WASHER	1		
13	27	34486 3	GASKET	1		3
14		52185	CLAMP	1		
15	10	805559	SCREW (3/8-16 X 3/4 IN.)	1		
16	84	816608A83	CABLE KIT-IGNITION (SPARK PLL	1		
17	85	63709A 1	BOOT KIT	8		
18	33	816336	SPARK PLUG	8		
18	33	803990	SPARK PLUG- Platinum (Horizon)	8		
19		54676	RETAINER (2 WIRE)	2		
20		32784	RETAINER (3 WIRE)	2		
21		32784	RETAINER (4 WIRE)	2		
22	392	805570A 2	COIL-IGNITION	1		
23		65970T 1	BRACKET-COIL	1		
24	10	41408	SCREW (#10-32 X 1-1/2 IN.)	1		
25	13	26996	LOCKWASHER (#10)	2		
26	11	68219	NUT (#10-32)	2		
27	10	98261	SCREW (3/8-16 X 3/4 IN.)	1		
28	12	20533	WASHER	1		
29	16	90096A 1	STUD ASSEMBLY	2		
30	54	72821	RETAINER	2		
-	27	75611A98	GASKET SET-ENGINE OVERHAU	1		