


WIRING HARNESS (EFI)

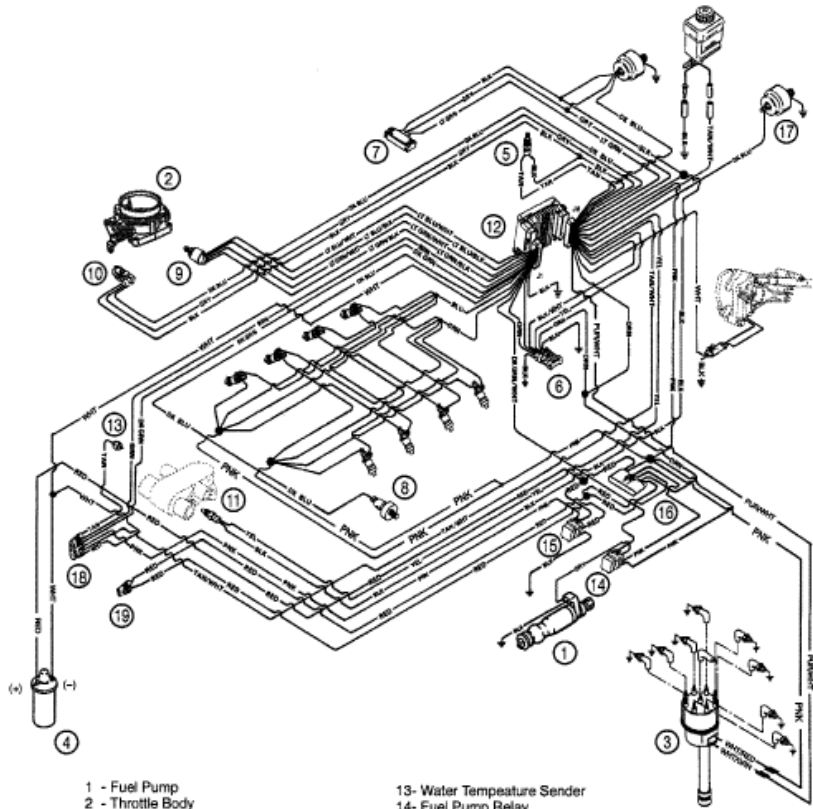

- 1 - Fuel Pump
- 2 - Throttle Body
- 3 - Distributor
- 4 - Coil
- 5 - Manifold Air Temperature Sensor (MAT)
- 6 - Data Link Connector (DLC)
- 7 - Manifold Absolute Pressure (MAP) Sensor
- 8 - Knock Sensor
- 9 - Idle Air Control (IAC)
- 10- Throttle Position (TP) Sensor
- 11 - Engine Coolant Temperature (ECT) Sensor
- 12- Electronic Control Module (ECM)
- 13- Water Temperature Sender
- 14- Fuel Pump Relay
- 15- Ignition/Fuel System Relay
- 16- Fuses (15 Amp) Fuel Pump, (15 Amp) ECM/DLC/Battery, (10 Amp) ECM/Injector/Ignition/Knock Module
- 17- Oil Pressure Sensor
- 18- Harness Connector To Starting/Charging Harness
- 19- Positive (+) Power Wire To Engine Circuit Breaker
- 20- Shift Plate
- 21- Gear Lube Monitor
- 22- Fuel Pressure Switch
- 23- Water Temperature Sender
- 24- Water Temperature Sender

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-		861159T 1	WIRING HARNESS-ENGINE	1		1