



9801

Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		884794A	DISTRIBUTOR ASSEMBLY	1	
2		884792	CAP, Distributor	1	
3	10	884786	SCREW	2	
4		884790	ROTOR	1	
5	10	884788	SCREW	2	
6		NSS	NOT SOLD SEPARATE, Sensor.	1	
7		NSS	NOT SOLD SEPARATE, Screw	2	
8	43	884789	GEAR ASSEMBLY	1	
9	54	88731	CLAMP	1	
10	10	40011149	SCREW, (M8 x 25)	1	
11	27	34486	GASKET	1	
12	84	863656A	CABLE KIT, Ignition (Spark Plugs a	1	
13	84	863657A	CABLE, Coil Wire Assembly	1	
14	33	884019	SPARK PLUG	8	(AC 41-932)
15		54676	RETAINER, Two Wire	2	
16		32783	RETAINER, Three Wire	2	
17		32784	RETAINER, Four Wire	2	
18	392	863704T	COIL, Ignition	1	
19	10	65746	SCREW AND LOCKWASHER, (.25	2	
20		863663	BRACKET, Coil	1	
21	10	98261	SCREW, (.375-16 x .750)	2	
22	16	90096A	STUD ASSEMBLY, (#10-32 x Spec	2	
23	54	72821	RETAINER	2	
-	27	861246A98	GASKET SET, Engine Overhaul	1	