



**IMPORTANT**

THE ONLY WALTER TRANSMISSION PARTS AVAILABLE FROM MERCURY MARINE ARE THOSE LISTED ON THIS PAGE. IF OTHER WALTER PARTS ARE REQUIRED, THEY MUST BE OBTAINED FROM AN AUTHORIZED WALTER DEALER. FOR REPLACEMENT PARTS, INFORMATION, WARRANTY INFORMATION OR SERVICE MANUALS, PLEASE HAVE AVAILABLE THE SERIAL NUMBER OF YOUR V-DRIVE AND CONTACT:

THE WALTER MACHINE COMPANY, INC.  
 84 - 98 CAMBRIDGE AVENUE  
 JERSEY CITY, NJ 07307  
 TEL: 201-656-5654 FAX: 201-656-0318

**Parts List**

Ref	Class	Part	Description	Qty	Comment	Footnote
1		NSS	NOT SOLD SEPARATE	1	(2.09:1)	
1		NSS	NOT SOLD SEPARATE	1	(2.09:1)	
2		860308A 3	HOUSING ASSEMBLY, Adaptor	1	(71C)	
2		860308A 4	HOUSING ASSEMBLY, Adaptor	1	(72C)	
3	11	86226	NUT, (.375-16)	6		
4	13	35048	LOCKWASHER, (.375)	6		
5	10	28636	SCREW, (.250-20 x .750)	2		
6	13	26992	LOCKWASHER, (.250)	2		
7	22	860378	ELBOW (90 Degree)	2		
8	22	860379	FITTING, Barb	2		
9	32	17435 79	HOSE, (.96.00 Inches Bulk) (To Ser	1		
10	54	815504222	CLAMP, Worm Gear, Hose	2		
N.S.	19	807992 3	COVER, Hose Clamp End	AR		