



- A - Audio Warning Components**
 1- Oil Pressure Switch
 2- Drive Unit Oil Level
- B - Instrumentation Components**
 1- Oil Pressure Sender
 2- Water Temperature Sender
 3- Trim Sender
- C - Charging and Starting Components**
 1- Alternator
 2- Ground Stud
 3- Starter
 4- Circuit Breaker
 5- Starter Slave Solenoid
- a- Positive Power Wire To EFI System Harness
 b- Harness Connector To EFI System Harness
 c- Auxiliary Tachometer Lead

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	84	861819T 1	WIRING HARNESS, Engine	1	(Use With Mando Alternator With \	
-	84	862179T 1	WIRING HARNESS, Engine	1	(Use With Delco Alternator With M	